


How to read your Three-Phase AMI Meter

For Meter Code 0540

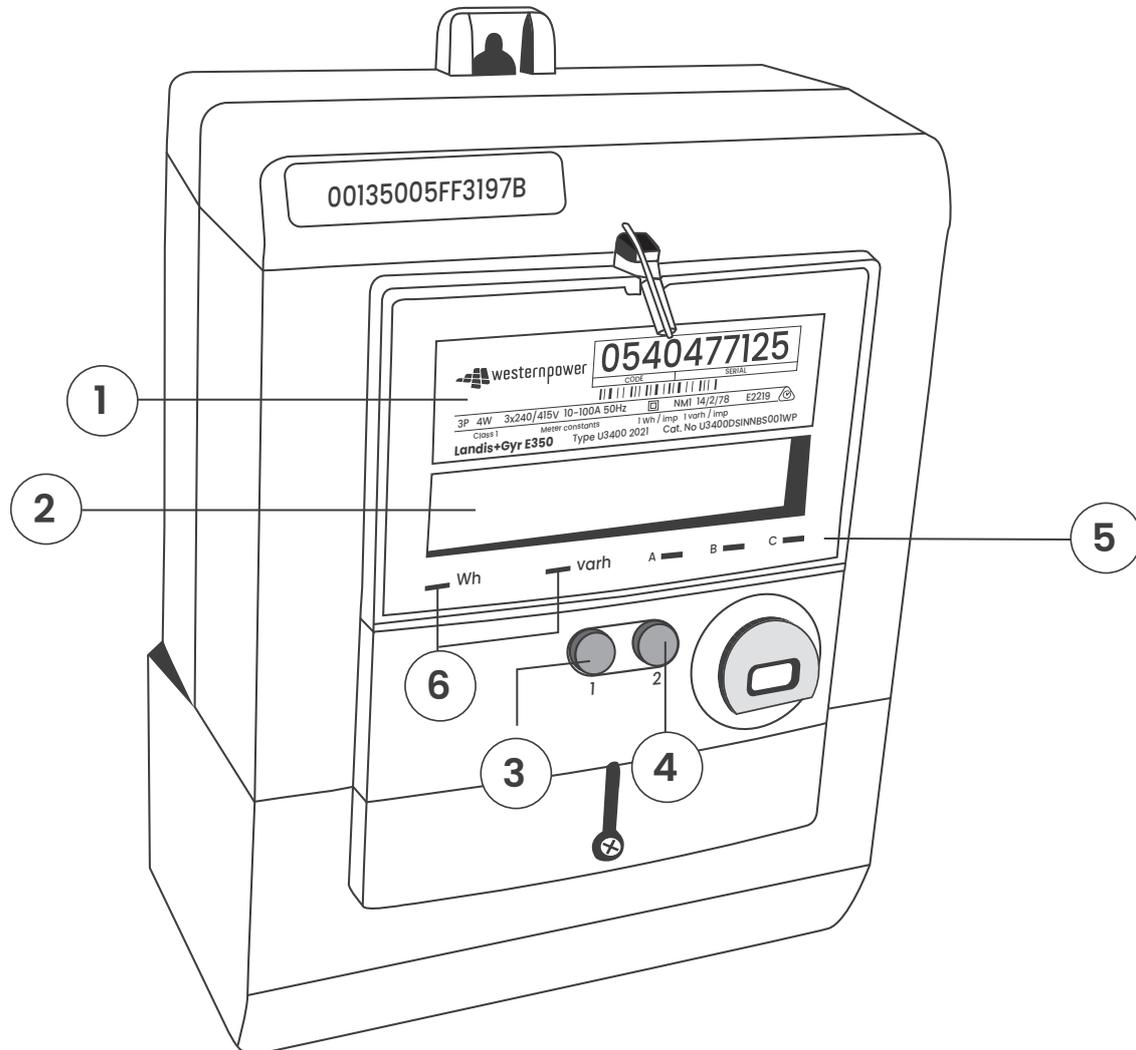

- 1 **Meter number** – This is a number unique to this meter, if you have an outage or we need to quickly identify your property, this is the best number to use. The first four digits also identify the model of the meter.
- 2 **LCD display** – Displays a cycle of information, primarily the current accumulated usage by this meter.
- 3 **Alt button** – Press and hold this button for two seconds to access the alternate channels.
- 4 **ARM breaker reconnect button** – Used to reconnect a disconnected meter once it has been remotely armed. Please see our metering FAQs for full instructions or watch the video [HERE](#).
- 5 **Phase indicator lights** – These indicate which phases are connected and energised. If you have only partial power to your property, these may help you determine if the fault is with the network or within your own property.
- 6 **Pulse indicators** – These lights pulse on & off when electricity is being consumed; pulses get faster as electricity consumed increases

How to read your Three-Phase AMI Meter

For Meter Code 0540

The display will rotate through the programmed channels, identified by the channel number in the Left of the display. Pressing and holding the Alt button will shift the display to the alternate channels.



The channels on your digital meter are determined by the tariff you selected for your electricity account. The information on your meter is not appropriate for customer identification or diagnosis of electrical problems – always refer any electrical work in your home to an electrician, and report power outages, electric shocks or electrical hazards to Western Power.

Standard channel list

Normal Display List		
Scroll Time [Secs] 5		
Display ID	Channel name	Description
88	Display Test	All LED segments are turned on
4	Time(hh:mm)	The current time
5	Date	The current date
tot	kWh Imported Total	The total import of electricity (consumption)
10	kWh Imported Total Current Rate A	The total import of electricity (consumption) at rate A
20	kWh Imported Total Current Rate C	The total import of electricity (consumption) at rate C
30	kWh Imported Total Current Rate B	The total import of electricity (consumption) at rate B
40	kWh Imported Total Current Rate D	The total import of electricity (consumption) at rate D
99	Error	Meter error encountered

How to read your Three-Phase AMI Meter

For Meter Code 0540

Standard Channel list

Alternative 1 Display List		
Scroll Time [Secs] 5		
Display ID	channel name	Description
15	KW Import Rate A	
25	KW Import Rate C	
42	Firmware Revision	Software version installed on the meter
47/107	kWh Exported Total	The total export of electricity across all rates (generation)
50	kWh Exported Total Total Current Rate A	The total export of electricity at rate A
60	kWh Exported Total Total Current Rate C	The total export of electricity at rate C
71	kWh Exported Total Total Current Rate B	The total export of electricity at rate B
71	Voltage / Voltage Phase A	Voltage on Phase A (or just voltage in a single phase connection)
72	Voltage Phase B	Voltage on Phase B
73	Voltage Phase C	Voltage on Phase C
98	Firmware Revision	Software version installed on the meter
93	Power Factor Total	A measure of the efficiency of your installation. Reads somewhere between 0 and 1 (i.e. 0.9) and can be affected by devices that build up but not necessarily "use" power, e.g. capacitors or inductors.
88	Display Test	All LED segments are turned on

Completing remote reconnection

Completing remote reconnection

As well as being able to send electrical safety metrics and consumption data, AMI meters can be triggered remotely to disconnect/reconnect the property. As a safety precaution, reconnection must be performed at the meter by pressing and holding the ARM breaker reconnect button.

Once a retailer requests the meter be reconnected a signal is sent to “arm” the meter for reconnection.

 
Before reconnecting your meter, please check that appliances are turned off inside the house.

Video instructions are available here: [HERE](#)

1. If the meter is disconnected and not ready to reconnect it shows the current readings above an icon representing the open circuit breaker.



2. If the meter is armed and ready to reconnect it will be scrolling through the words, “PrESS btn2 to ConnEct” (If you press the button before the meter is armed, it will only trigger the Boost function):



3. The customer should push and hold button 2 (the right hand one) – the display will count down CO_n3-CO_n1 and then the meter will click as the circuit breaker re-engages and the property is connected:



4. The icon on the display will update to indicate the circuit breaker is now closed and the property has power:

