Distribution Substation Manual (DSM)

Section 8 – Distribution Automation



Document release information

Client	Western Power
Project name	Distribution Substation Manual
Document number	8
Document title	Distribution Automation
Revision status	6th Edition

Document prepared by:

Western Power ABN 18540492861 85 Prinsep Road, Jandakot

Revision History									
Edition/Revision Number	Issue Date	Description	Endorsed By	Approved By					
First Edition	June 1997	NA	NA						
Second Edition	February 2002	Revised from First Edition	Ed Wilcox	Robert Rogerson					
Third Edition	March 2007	DSM split into 10 Sections – Introduction and Sections 1 to 9	Sandeep Magan	Robert Rogerson					
Fourth Edition	June 2009	Added DSM8-07 series	Sandeep Magan	Robert Rogerson					
Fifth Edition			Sandeep Magan	Robert Rogerson					
Sixth Edition	July 2010	Updated DSM8-07 series and added DSM8-08 (UGFI) series	Sandeep Magan	Robert Rogerson					

© Copyright of Western Power

Any use of this material except in accordance with a written agreement with Western Power is prohibited.

Sixth edition July 2010

Apart from any fair dealing for the purposes of study, research, criticism or review, as permitted under the *Copyright Act*, no part may be reproduced by any process without written permission. Inquiries should be made to Distribution Standards and Policy Manager, Asset Management Division, Western Power, 85 Prinsep Road, Jandakot 6164

8 Distribution Automation

Index Of Drawings

DRAWING NUMBER	Drawing Title
DSM-8-01	Common Drawings Common drawings that are associated with the Automation of all Switchgear types.
Sheet 1 of 16	General Arrangement of SCADA Equipment
Sheet 2 of 16	Typical Block Arrangement
Sheet 3 of 16	Line Isolation Enclosure Arrangement and Termination Diagram
Sheet 4 of 16	Control Box General Arrangement
Sheet 5 of 16	Control Box Termination & Wiring Diagram
Sheet 6 of 16	Krone Termination Details
Sheet 7 of 16	Krone Termination Rack Notes
Sheet 8 of 16	Krone Label Details
Sheet 9 of 16	Almos Remote Terminal Unit (RTU) Termination Diagram
Sheet 10 of 16	Battery Charger Termination Diagram – Magellan (Type)
Sheet 11 of 16	Battery Charger Termination Diagram – Saft Nife (Type)
Sheet 12 of 16	Cannon Type Plug in Operating Station for Distant Operation
Sheet 13 of 16	Legend & Notes for Distribution Automation
Sheet 14 of 16	Labels for Distribution Automation
Sheet 15 of 16	Switchgear Position Identification
Sheet 16 of 16	Substation Distribution Board for Sole Use and Customer Owned Substations
DSM-8-02	Alstom/Areva Drawings
	Drawings associated specifically to Alstom/Areva Ring Main Switchgear
Sheet 1 of 10	Control Box Mounting Position of Alstom RMU Isolators
Sheet 2 of 10	Alstom RMU Isolators (2+1, 2+2) Control Box mounting bracket Cutout and Drilling Detail
Sheet 3 of 10	Schematic for Alstom RMU Isolators



Drawing Number	Drawing Title
Sheet 4 of 10	X1 – Control Box Termination & Wiring Diagram for Alstom RMU Isolators
Sheet 5 of 10	X2 – Switchgear Termination & Wiring Diagram for Alstom RMU Isolators
Sheet 6 of 10	General Arrangement for Alstom Extensible Isolators
Sheet 7 of 10	Schematic Diagram for Alstom M24 Fluokit Extensible Isolators
Sheet 8 of 10	X2 – S/g Termination & Wiring Diagram-Alstom M24 Fluokit Extensible Isolators
Sheet 9 of 10	S.Line, Control and Spare Contact Diagrams - Areva M24+ Fluokit Ext Isolators
Sheet 10 of 10	Termination & Wiring Diagram for Areva M24+ Fluokit Extensible Isolators
DSM-8-03	F & G Drawings
	Drawings associated specifically to F&G Switchgear
Sheet 1 of 4	Control Box Mounting Position for F&G GE/GA Isolators
Sheet 2 of 4	Schematic of F&G GE/GA Isolators
Sheet 3 of 4	X1 – Control Box Termination & Wiring Diagram for F&G GE/GA Isolators
Sheet 4 of 4	X2 – Switchgear Termination & Wiring Diagram for F&G GE/GA Isolators
DSM-8-04	Merlin Gerin Drawings
	Drawing associated specifically to Merlin Gerin Switchgear
Sheet 1 of 10	Isolation Switch Mounting Position of Merlin Gerin RM6 Isolators
Sheet 2 of 10	Schematic for Merlin Gerin RM6 Isolators
Sheet 3 of 10	X2 - Control Box Termination & Wiring Diagram for Merlin Gerin RM6 Isolators
Sheet 4 of 10	X2 – Switchgear Modification to Printed Circuit Board for Merlin Gerin RM6 Isolators
Sheet 5 of 10	Isolation Switch Mounting Position for Merlin Gerin IM6/VM6 Isolators
Sheet 6 of 10	Schematic for Merlin Gerin IM6/VM6 Isolators
Sheet 7 of 10	X2 – Switchgear Termination & Wiring Diagram for Merlin Gerin RM6 Isolators
Sheet 8 of 10	Isolation Switch Mounting Position for Merlin Gerin SM6 Isolators
Sheet 9 of 10	Schematic for Merlin Gerin SM6 Isolators
Sheet 10 of 10	X2 – Switchgear Termination & Wiring Diagram for Merlin Gerin SM6 Isolators
DSM-8-05	Long & Crawford Drawings
Sheet 1 of 13	Long and Crawford Schematic for Double Control Box to suit T4GF3, J4, R4




Drawing Number	Drawing Title
Sheet 2 of 13	Long and Crawford Schematic for Single Control Box to suit T4GF3, J4, R4
Sheet 3 of 13	Long and Crawford Termination for Double Control Box to suit T4GF3, J4, R4
Sheet 4 of 13	Long and Crawford Termination for Single Control Box to suit T4GF3, J4, R4
Sheet 5 of 13	Long and Crawford Double Control Box Arrangement
Sheet 6 of 13	Long and Crawford Single Control Box Arrangement
Sheet 7 of 13	Long and Crawford Fabrication of J4 Actuator Mounting Bracket
Sheet 8 of 13	Long and Crawford Fabrication of R4 Actuator Mounting Bracket
Sheet 9 of 13	Long and Crawford Fabrication of T4GF3 Actuator Mounting Bracket
Sheet 10 of 13	Long and Crawford Fabrication of J4 Proximity Switch Mounting Bracket
Sheet 11 of 13	Long and Crawford Fabrication of T4GF3, R4 Proximity Switch Mounting Bracket
Sheet 12 of 13	Long and Crawford Fabrication of J4 Actuator Operating Handle
Sheet 13 of 13	Long and Crawford Fabrication of T4GF3, R4 Actuator Operating Handle
DSM-8-06	ABB Drawings
	Drawings associated specifically to ABB Switchgear
Sheet 1 of 1	ABB Schematic for RGB12 Switchgear
DSM-8-07	Schneider RM6 RMU, RTU, AC power supply, modem, antenna and fibre optic connection diagrams
Sheet 1 of 7	Schneider RM6 RMU - MPS Transformer AC power supply to RTU (located adjacent or closer to RMU) – Installation details
Sheet 2 of 7	Schneider RM6 RMU - Local Pillar AC power supply to RTU (\leq 200m) – Installation details
Sheet 3 of 7	Schneider RM6 RMU - SPUDS transformer AC power supply to RTU (> 200m) $-$ Installation details
Sheet 4 of 7	Schneider RM6 RMU - RTU, modem and antenna wiring diagram
Sheet 5 of 7	Schneider RM6 RMU - RTU, fibre optic modem & interface general wiring diagram
Sheet 6 of 7	Schneider RM6 RMU - RMU and RTU (T200H) connection drawing
Sheet 7 of 7	Schneider RM6 RMU - CT connection diagram



DRAWING NUMBER	Drawing Title
DSM-8-08	Fault Indicator (Horstmann Alpha E) Control Box, RMU, RTU, Fault Indicator and AC power supply connection diagrams
Sheet 1 of 6	Fault indicator control box block diagram (for retrofitting to RMUs) c/w drawing references of control box arrangement, Krone termination block connections, goanna GT-30 RTU, AC & DC distribution and terminations plus settings diagrams for Horstmann Alpha E fault indicator
Sheet 2 of 6	Fault indicator RTU box mounted on existing RMU (Areva/Schneider) - Installation on piano lid kiosk
Sheet 3 of 6	Fault indicator (Horstmann Alpha E) fitted to existing RMU in kiosk – Connection diagram
Sheet 4 of 6	Fault indicator (Horstmann Alpha E) fitted to existing RMU in kiosk (Retrofitted CTs) – Connection diagram
Sheet 5 of 6	AC Supply to fault indicator from MPS transformer LV AC pillar located adjacent or close to RMU (≤ 20m) – Installation details
Sheet 6 of 6	AC Supply to fault indicator RTU box from LV AC pillar located up to 200m to RMU (≤ 200m) – Installation details




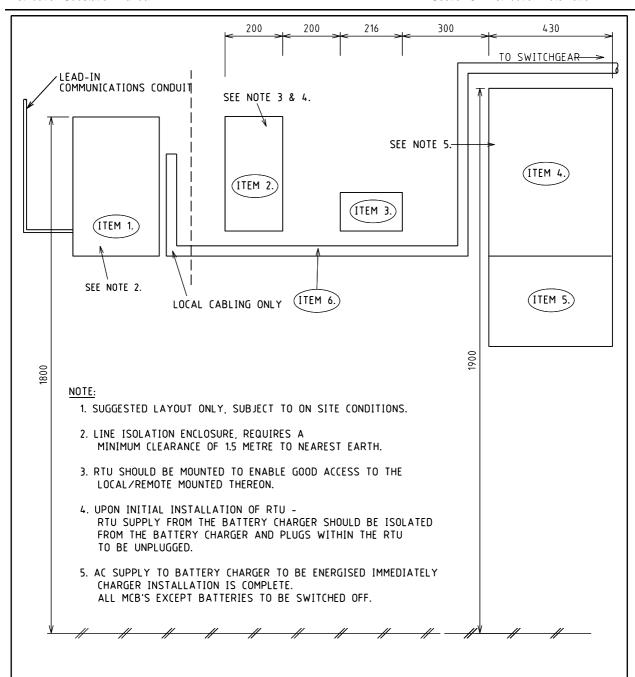


ITEM No.	ITEM DESCRIPTION
1	LINE ISOLATION ENCLOSURE
2	REMOTE TERMINAL UNIT (RTU)
3	KRONE TERMINATION RACK
4	24V DC BATTERY CHARGER
5	12V DC LEAD ACID BATTERY CELL
6	50 x 50 GREY SOLID DUCT

	GENERAL ARRANGEMENT OF	DSM-8-01			
CUSTOMER SERVICES DIVISION DISTRIBUTION SUBSTATION	SCADA EQUIPMENT	SHEET 1 OF 16			
MANUAL	DISTRIBUTION AUTOMATION	DATE: REVISION: 28/05/01			




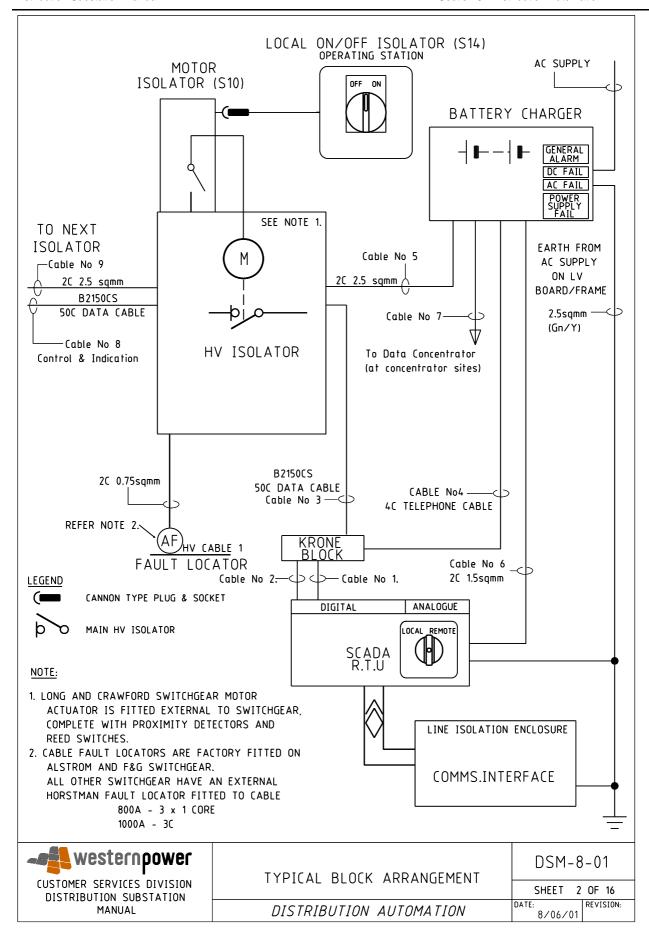



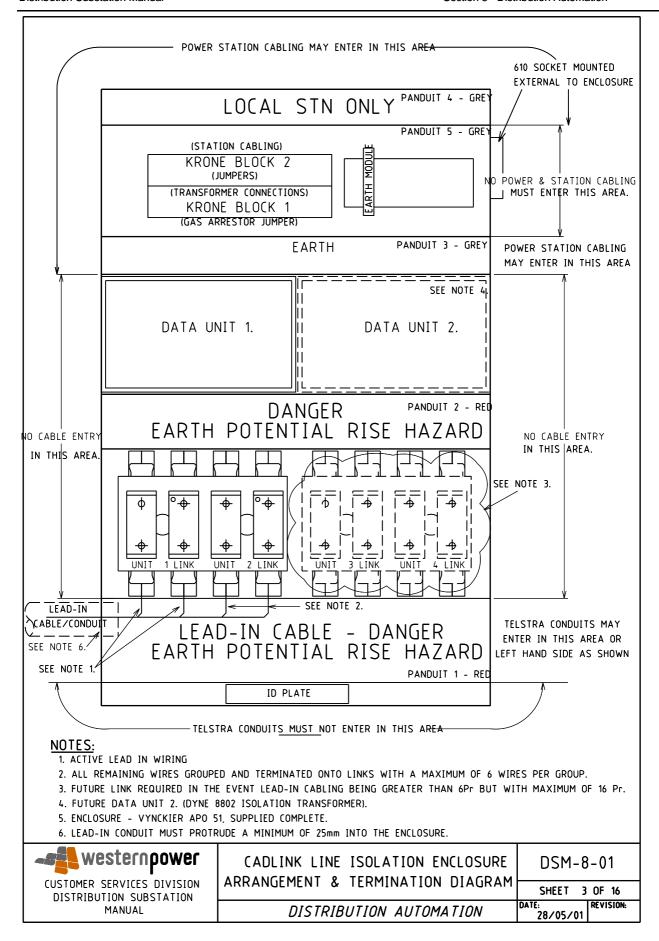




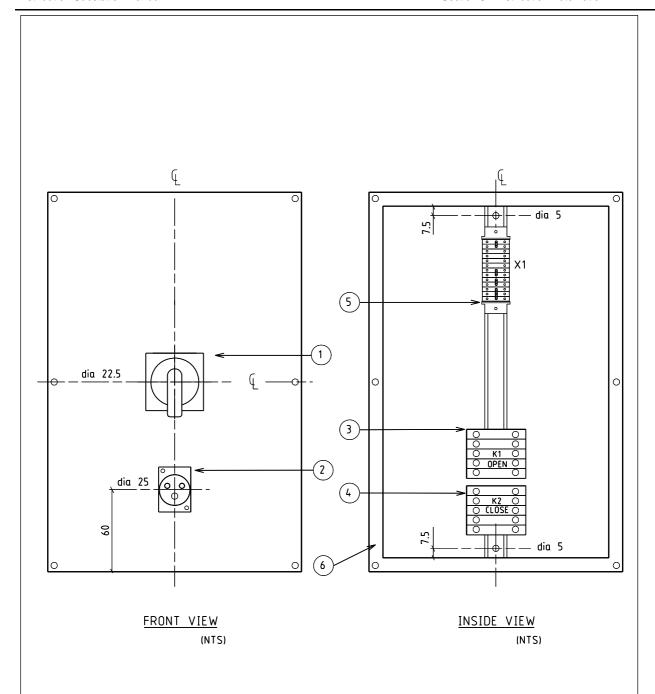

ITEM	ITEM	CCT
No.	11611	REF
1	MOTOR ISOLATOR	S10
2	CANNON SOCKET	X6
3	CONTACTOR	K1
4	CONTACTOR	K2
5	TERMINAL BLOCK	X1
6	CONTROL BOX	MTD ON S'GEAR

westernpower	CONTROL BOX	DSM-8-01
CUSTOMER SERVICES DIVISION DISTRIBUTION SUBSTATION	GENERAL ARRANGEMENT	SHEET 4 OF 16
MANUAL	DISTRIBUTION AUTOMATION	DATE: REVISION: 28/05/01



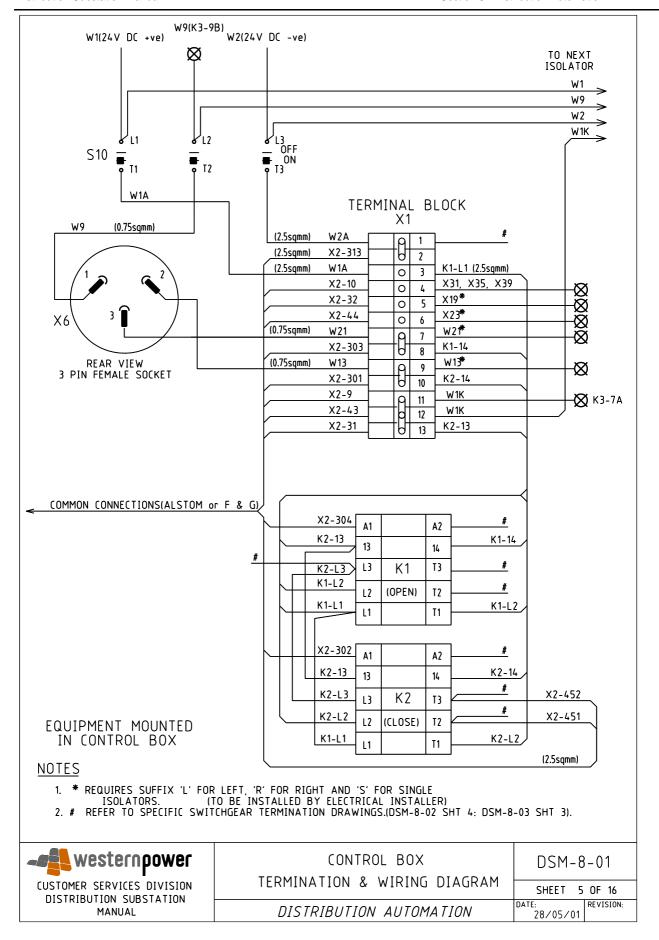




										_												
			1	CON	TROL	. &	INDI	DICATION														
			1A	1B	2A	2B	3A	3B	4 A	4B	5A	5B	6A	6B	7A	7B	8A	8B	9A	9B	0A	0B
JUMPER	TO		K4		K4						K4		K4									
CADIE	FROM					<u> </u>				<u> </u>		_		_		_		<u> </u>				,
	NUMBER	<u>'</u>	В	3 1/W	В	3 1/B		3 2/W		3 2/0r	В	3 3/W	В	3 3/Gn		3 4/W		3 / /Pa		4 W		4 B
	.OUR Io		W7	W21L	<u> </u>	W13L		27 W X19L		X23L	W7	W21R	_			X19R		4/Br X23R		X43		X47
			CON			TROL	INDICA		INDIC		CONT	<u> </u>		TROL	INDICA		INDIC	ATION		12		
POINT	NAME		OPI			SED	ISOL		l	SED	ISOL		CLO		OPI			SED	AC A	LARM	DC A	LARM
			ISOL,		ISOL /		13067		ı	ATOR L'		5. 410K	ISOL	R'	ISOL/	R'		ATOR R'				
ABLE No	.TO RTU	1	1	1	1	1		2		2	1	1	1	1		2		2		2		2
COL	.OUR		0r	Р	DB	Gy	R	R	R	LB	R/B	R/Gn	Y/R	W/R	R	Gn	R	Υ	R	W	R	Bk
JUMPER	TO						K1-4A		K1-7A						K1-8A		K1-9A		K1-0A		K2-0A	
	FROM	Ш					K3-8A		K1-3A						K1-4A		K1-7A		K1-8A		K1-9A	
		ſ	_							1												
			2	CON	TROL	. &	INDI	ATI	ON													
		ľ	1A	1B	2A	2B	3A	3B	4 A	4B	5A	5B	6A	6B	7A	7B	8A	8B	9A	9B	0 A	0B
JUMPER	TO		K4		K4						K4		К4									
JOI 11 EIX	FROM																					
CABLE N				3	_	3		3		3		3		3		3		3		3		3
COLO	UR		B	5/W	B	5/Gy	-	6/R		6/B	B	7/R	B	7/0r		8/R		8/Gn		9/R		9/B
No		H	W7 CON	W21S TROI		W13S TROL	INDICA	X19S		X23S ATION	W7		W7						CAE	X31	CAI	X 35
POINT N	ΔMF		OPI			SED	OP			SED	CONT	TROL	CONT	TROL	INDICA	ATION	INDIC.	ATION	CABLE N FAULT		CABLE FAULT	
. 01.11	A. I.E.		ISOL.		ISOL,	ATOR S'	ISOL,	ATOR S'	ISOL,	ATOR S'	SP	ARE	SPA	ARE	SPARE SPARE			ARE	LOCATOR 'L' AF1		LOC 4	
ABLE No.	TO RTU		1	1	1	1		2		2	1	1	1	1		2		2		2		2
COL	.OUR		R/Bk	R/Br	Y/B	W/B	R	Br	R	٧	B/Bk	Or/B	Gn∕B	Gy/B	R	0r	R	Р	R	DB	R	Gy
JUMPER	TO						● K2-4A		€ K2-7A						₩ K2-8A		€ K2-9A		€ K2-0A		K1-0A	
JOHNER	FROM						K1-7B		K2-3A						K2-4A		K2-7A		K2-8A		K2-9A	
							& ME	TERI	NG					ı								
	70	Щ	1A	1B	2 A	2B	3A	3B	4A	4B	5A	5B	6A	6B	7A	7B	8A	8B	9A	9B	OA	0B
JUMPER	TO FROM	Н														K3-8A ●	K3-7B					
CABLE		H		3		3		3	3	3	3	3	3	3	3		K3-/B	3	3	3	4	4
CADEL		$\parallel \parallel$		10/R		10/Gy		_	_					_	7 15/Bk	R	R	Ť	16/Y		R	Bk
No				X39		X25C										W1K	W1K	W2	W7	W9	X25C	
		\parallel	CAE		SWI				٠_		٠.	-	٠.	_		+	+	<u> </u>			SWI ME	
POINT N	NAME		FAU LOCA		ME:		INDIC:		Tx CURF		Tx CURR		CURF	: 3 RENT	CONT SUPI		CON1 SUP	TROL PLY	LOC REM		FAIL	URE
		Ш		AF3																	BATT	CUB.
CABLE No.		Щ		2	<u> </u>	_	<u> </u>	2	1	1	1	1	1	1	_	_	2	2		2		2
(0)	LOUR	Щ	R ●●	R/B	R ●●	R	R ●●	Y/B	R	LB	Gn	Y	W	Bk	R ● ●	R	Y/R	W/R	_	R/Br		R/G
JUMPER	TO FROM		K3-2A			K3-0A	K3-7A								K3-7B	_	-		K4		•	
	IRUM	Н	K2-3A		K3-1A	<u> </u>	K3-2A		<u> </u>	<u> </u>	<u> </u>		<u> </u>	<u> </u>	K3-3A	K3-7A	4	<u> </u>	<u> </u>	<u> </u>	K3-2B	
									Th	IIS DI	RAWII	VG TC) BE	READ	IN C	ONJUI	л ЛС <i>ТІО</i>	N WI	TH -	DSM	8-01	SH1
-6	wes	st	ern	ιρο	wei	r	KRONE TERMINATION									DSM-8-01						
CUSTO	OMER SE	ER۱	VICES	DIV	/ISI0	ı	DETAILS								-	Ç.	HEET	6 N	= 14			
DIS	DISTRIBUTION SUBSTATION																					
	MANUAL DISTRIBUTION AUTOMATION CONTROL CON																					



COLOUR CODE FOR CABLE 3							
PAIR COLOURS							
PAIR No.	WIRE 1	WIRE 2					
1	WHITE	BLUE					
2	WHITE	ORANGE					
3	WHITE	GREEN					
4	WHITE	BROWN					
5	WHITE	GREY					
6	RED	BLUE					
7	RED	ORANGE					
8	RED	GREEN					
9	RED	BROWN					
10	RED	GREY					
11	BLACK	BLUE					
12	BLACK	ORANGE					
13	BLACK	GREEN					
14	BLACK	BROWN					
15	BLACK	GREY					
16	YELLOW	BLUE					
17	YELLOW	ORANGE					
18	YELLOW	GREEN					
19	YELLOW	BROWN					
20	YELLOW	GREY					
21	VIOLET	BLUE					
22	VIOLET	ORANGE					
23	VIOLET	GREEN					
24	VIOLET	BROWN					
25	VIOLET	GREY					

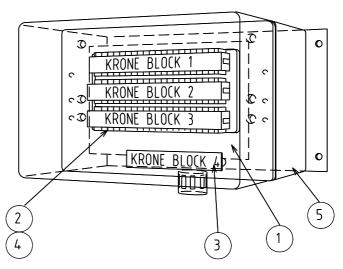


KRONE G.A. (FRONT VIEW)

ITEM No.	ITEM DESCRIPTION
1	30 PAIR DISTRIBUTION BOX - KRONE
2	LSA - PLUS DISCONNECTION, MODULE 2/10 PROFIL (BLACK)
3	EARTH STRIP F.D.P. (FINAL DISTRIBUTION POINT)
4	HINGED LABEL HOLDER
5	KRONE MOUNTING BRACKET

NOTE:

- CABLE No. 3 IS 25 PAIR DATA CABLE WIRE NUMBERS ARE SHOWN IN A FORMAT: PAIR No./COLOUR eg 3/W AND 3/Gn DENOTES THE WHITE/GREEN PAIR.
- 2. TOP FIELD WIRING BOTTOM - RTU WIRING.
- 3. FOR ALSTROM, F&G, RM6, VM6, SMG, YORSHIRE, ABB SWITCHGEAR INSTALL JUMPER K3-2A TO K3-2B & REMOVE 10/Gy FROM K3-2B.
- 4. K3-9A RUNS TO BREAKER CONTROL BOX BUT IS NOT USED (HISTORICAL)

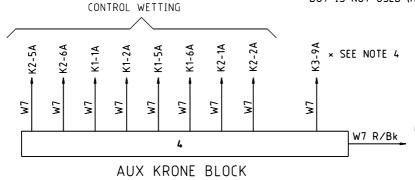

TERMINALS

CABLE No. 2 (TO RTU)
FROM LOCAL/REMOTE
SWITCH ON RTU +24V
FOR REMOTE OPERATION

westernpower

CUSTOMER SERVICES DIVISION DISTRIBUTION SUBSTATION MANUAL

KRONE
TERMINATION RACK NOTES

DISTRIBUTION AUTOMATION

DSM-8-01 SHEET 7 OF 16

DATE: 28/05/01

REVISION:



CONTROL & INDICATION

	CONT'L INDI	N T. CLOSE	CONT'L 'R' OPEN	CONT'L 'R' CLOSE	INDIC	INDIC	A(Supp Alarm	BATT. CH'GER ALARM
--	-------------	------------	--------------------	---------------------	-------	-------	---------------------	--------------------------

CONTROL & INDICATION

CONT'L	CONT'L	INDIC	.2. CFOZE INDIC	CONT'L SPARE	CONT'L SPARE	INDIC Spare	INDIC Spare	CABLE FAULT	CABLE FAULT


INDICATION & METERING

CABLE	SWITCH MECH ALARM	INDIC	Tx 1	Tx 2	Tx 3	 (ONT'L	CONT'L	LOCAL	SW'TCH MECH
FAULT'S			CURRENT	CURRENT			REMOTE	FAIL BATT	

1. HV SWITCH NUMBERS REQUIRED WHEN FITTING LABELS ON SITE. TO BE COMPLETED BY SCADA.


westernbower	KRONE
CUSTOMER SERVICES DIVISION DISTRIBUTION SUBSTATION	LABEL DETAILS
MANUAL	DISTRIBUTION AUTOMA

KRONE	DSM-8-01			
_ABEL DETAILS	SHEET 8 OF 16			

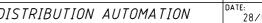


DATE: REVISION: 28/03/01




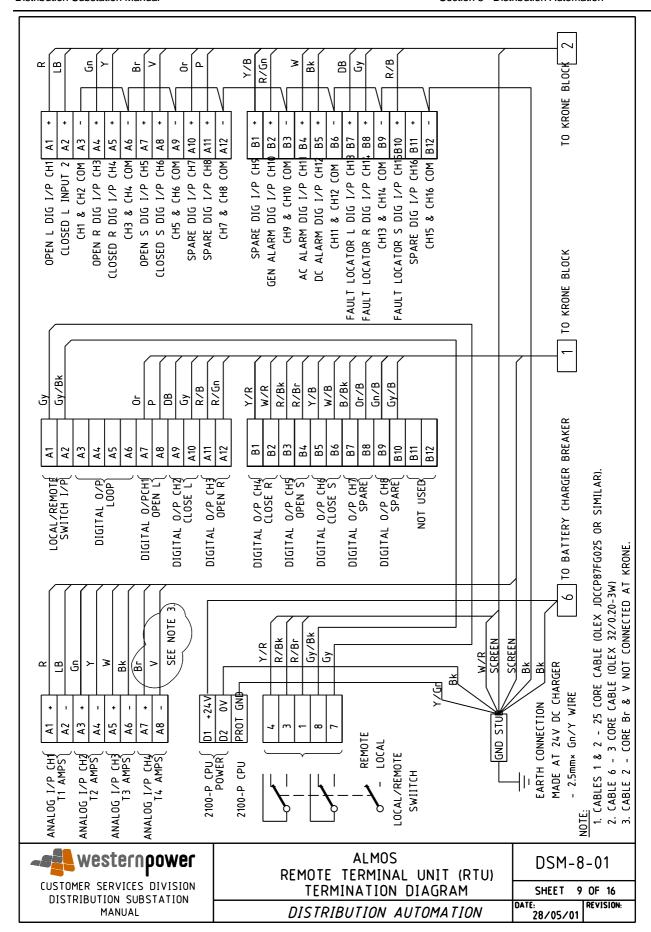



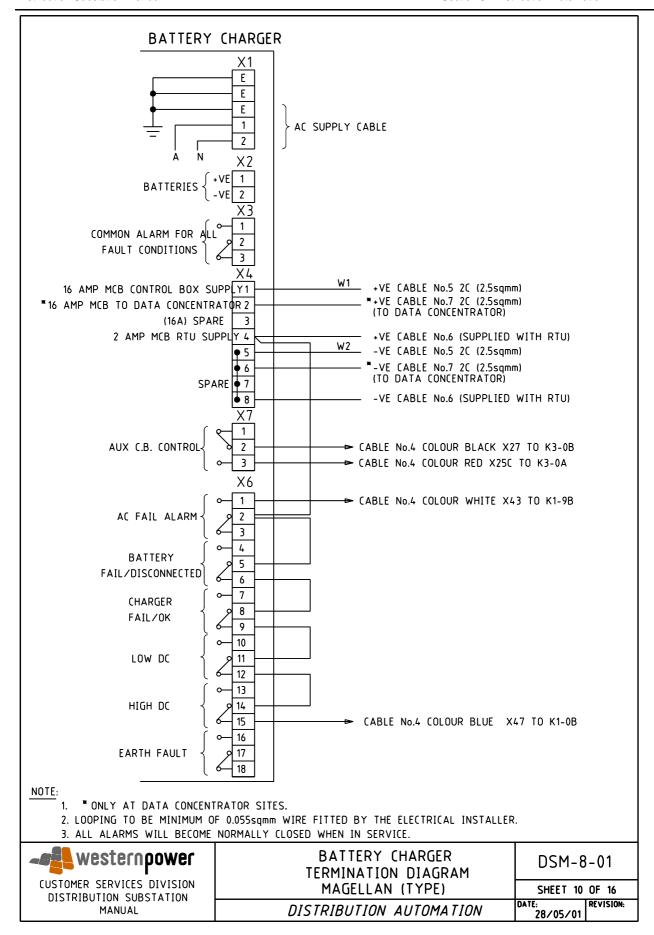



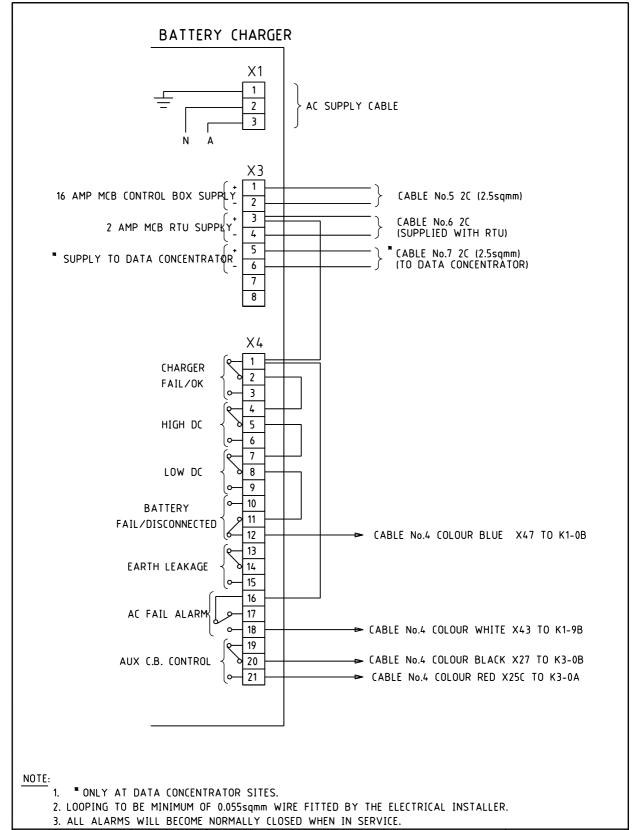

westernpower

CUSTOMER SERVICES DIVISION DISTRIBUTION SUBSTATION MANUAL

BATTERY CHARGER TERMINATION DIAGRAM SAFT NIFE (TYPE)


DISTRIBUTION AUTOMATION C

SHEET 11 OF 16

DSM-8-01

DATE: REVISION: 28/05/01



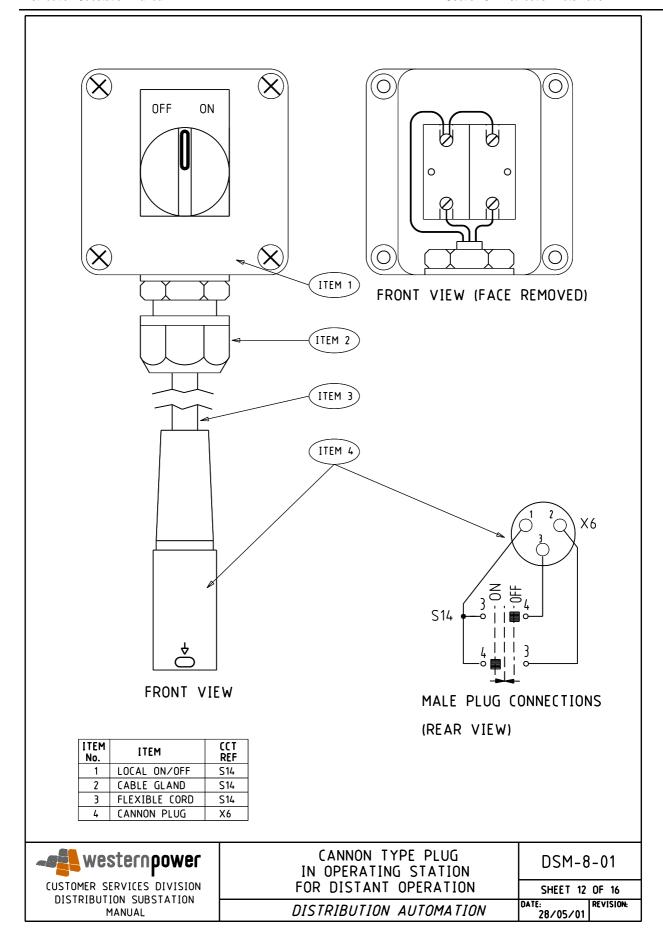



LEGEND

- FITTED TERMINALS IN SWITCHGEAR (X2)
- TERMINALS IN CONTROL BOX (X1)
- KRONE BLOCK TERMINAL REFER TO KRONE TERMINATION DRAWING No. DSM-8-01 SHT 6
- O TERMINALS ON CONTACTORS AND AUXILLIARY SWITCHES
- CANNON TYPE PLUG & SOCKET EXTERNAL TO SWITCHGEAR
- K1 CONTACTOR IN CONTROL BOX MOUNTED ON SWITCHGEAR
- K2 CONTACTOR IN CONTROL BOX MOUNTED ON SWITCHGEAR
- AL AUXILIARY SWITCH LOAD BRAKE
- AE AUXILIARY SWITCH EARTH
- S10 MOTOR ISOLATOR SWITCH MOUNTED ON SWITCHGEAR (ON/OFF)
- S11 MODE SELECTOR SWITCH MOUNTED ON R.T.U. (LOCAL/REMOTE)
- S14 PLUG IN OPERATING STATION FOR LOCAL DISTANT OPERATION
- X6 PLUG AND SOCKET
- Q11 HV SWITCH
- Q81 HV EARTH SWITCH
- KS KEY OPERATED SETTING SWITCH ALSTOM ONLY
- HS KEY OPERATOR HANDLE INTERLOCK SWITCH, LEVER AND LOCKING PRESENCE CONTACT.

NOTES

- THE REMOTE LOCAL SWITCH MOUNTED ON THE R.T.U PANEL HAS AUXILIARY CONTACTS ON IT TO INDICATE POSITION TO SCADA.
- 2. THE ISOLATOR S10 IS FOR THE ISOLATION OF CONTROL CIRCUIT OF THE BREAKER MOTOR, TO COMPLETELY ISOLATE THE SWITCHGEAR, TRIP THE MCB's AT THE BATTERY CHARGER FOR SWITCHGEAR & RTU SUPPLIES.
- 3. ALL CABLING TERMINATED ON SITE OTHER THAN COMMON CABLES SHOULD INCLUDE SUFFIX: 'L' FOR LEFT, 'R' FOR RIGHT, 'S' FOR SINGLE. SEE × ON SCHEMATICS AND TERMINATIONS.
- 4. HORSTMAN FAULT INDICATOR WITH MICROSWITCH AVAILABLE THROUGH HOLEC. 3C x 1c 800A PART No: 20-0606-000-800A
 - 3C 1000A PART No: 20-0608-000-1000A

LONG & CRAWFORD LEGEND


- TERMINALS IN SINGLE CONTROL BOX
- O TERMINALS IN DOUBLE CONTROL BOX
- ☐ TERMINALS IN BATTERY CHARGER
- BL, R or S AUXILIARY RELAY FOR OPEN OPERATION ON LEFT, RIGHT OR SINGLE ISOLATOR
- AL, R or S AUXILIARY RELAY FOR CLOSE OPERATION ON LEFT, RIGHT OR SINGLE ISOLATOR
- TL, R or S TIMER LOCKOUT RELAY FOR LEFT, RIGHT OR SINGLE ISOLATOR
- C1L, R or S PROXIMITY RELAY FOR OPEN INDICATION ON LEFT, RIGHT OR SINGLE ISOLATOR
- C2L, R or S PROXIMITY RELAY FOR CLOSE INDICATION ON LEFT, RIGHT OR SINGLE ISOLATOR
- B1L, R or S PROXIMITY SWITCH FOR OPEN INDICATION ON LEFT, RIGHT OR SINGLE ISOLATOR
- B2L, R or S PROXIMITY SWITCH FOR CLOSE OPERAION ON LEFT, RIGHT OR SINGLE ISOLATOR

LONG & CRAWFORD NOTES

- 1. REED SWITCHES ARE MOUNTED ON THE MOTOR ACTUATORS.
- 2. PROXIMITY SWITCHES ARE MOUNTED ON BRACKETS FITTED AROUND THE HV SWITCHING HANDLE.
- 3. TIMER LOCKOUT RELAY IS SET AT 5 SECONDS ABOVE THE TIME TAKEN FOR ONE OPERATION.
- 4. ALL CABLES ARE TO BE 0.75mm× UNLESS STATED OTHERWISE.
- 5. K4 IS A COMMON TERMINAL STRIP ON THE KRONE TERMINATION BOX.

westernpower	LEGENDS AND NOTES	DSM-8-01
CUSTOMER SERVICES DIVISION	LEGENDS AND NOTES	SHEET 13 OF 16
DISTRIBUTION SUBSTATION MANUAL	DISTRIBUTION AUTOMATION	DATE: REVISION: 28/05/01



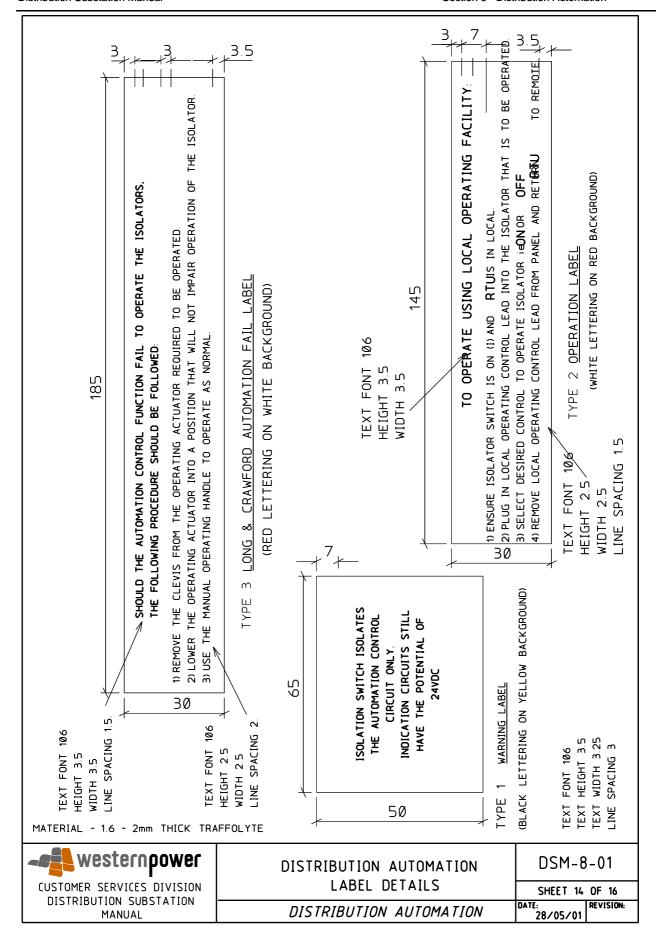



SWITCHGEAR POSITION IDENTIFICATION

Due to the large number and variety of configurations and switchgear, a means of position identification was developed to provide a standard for the installation and wiring of high voltage switchgear.

Reference to switch disconnectors as being L (Left), R (Right) and S (Single) describes the way in which the switchgear is identified on site in terms of its physical location on site, and the SCADA termination KRONE block.

This is also repeated in the SCADA database.


The L. R and S locations may also be designated as locations 1, 2 and 3 respectively on the Krone block. These may be used interchangeably in the database and Krone connection details.

The connection arrangements for different switchgear is shown below.


The Long & Crawford switchgear has been shown differently due to the custom control boxes used to house all the auxiliary type control hardware for the switch actuators.


The control boxes are either DOUBLE (for 2 switches) or SINGLE (for 1 switch) types which then correspond to L&R for the double box and S for the single box.

Other switchgear including Merlin Gerin, Brown Boveri, F&G and Alstom are not identified by the control box as the control hardware is usually built-in.

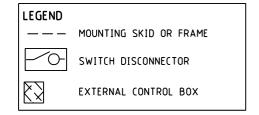




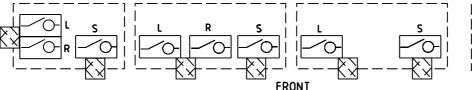

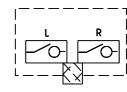

MERLIN GERIN, BROWN BOVERI, F&G, ALSTOM

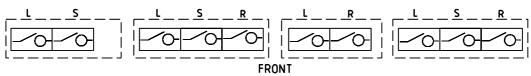

EXTENSIBLE UNITS

NON-EXTENSIBLE UNITS




SWITCHGEAR POSITION IDENTIFICATION

DSM-8-01 **SHEET 15 OF 16**

DATE: 03/04/02

REVISION:

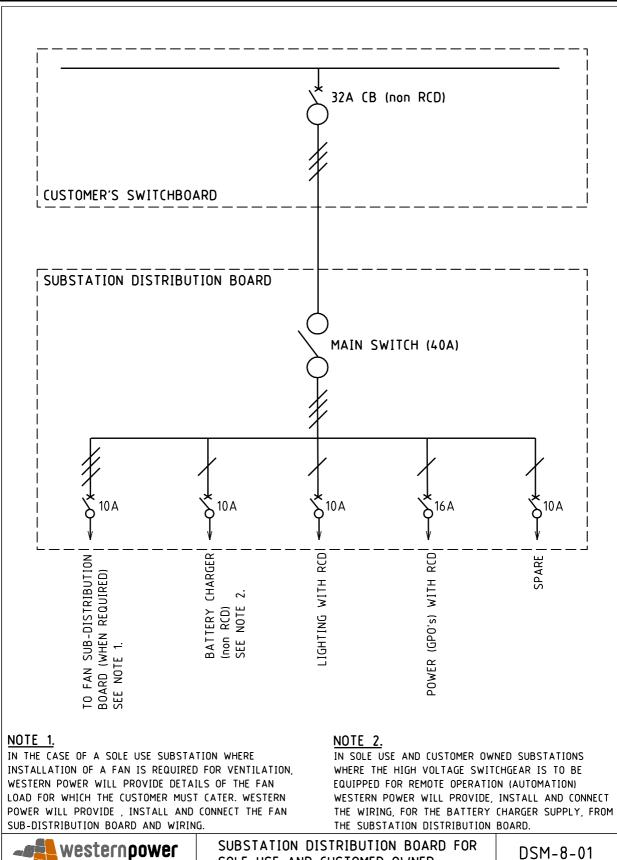

westernpower


CUSTOMER SERVICES DIVISION DISTRIBUTION SUBSTATION MANUAL

SUBSTATION DISTRIBUTION BOARD FO)R
SOLE USE AND CUSTOMER OWNED	
SUBSTATIONS	


SHEET 16 0F 16

03/04/02




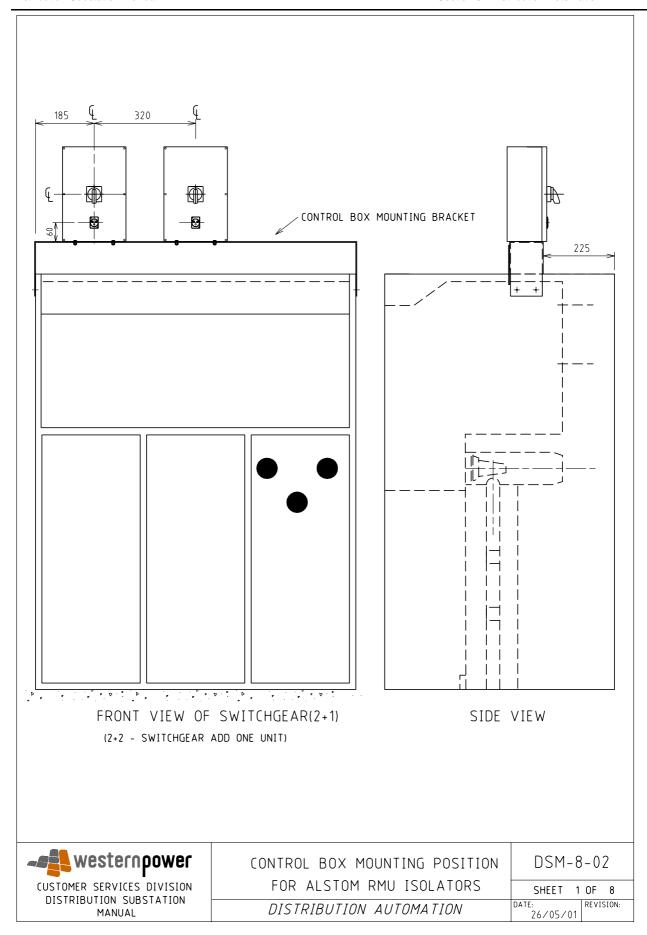




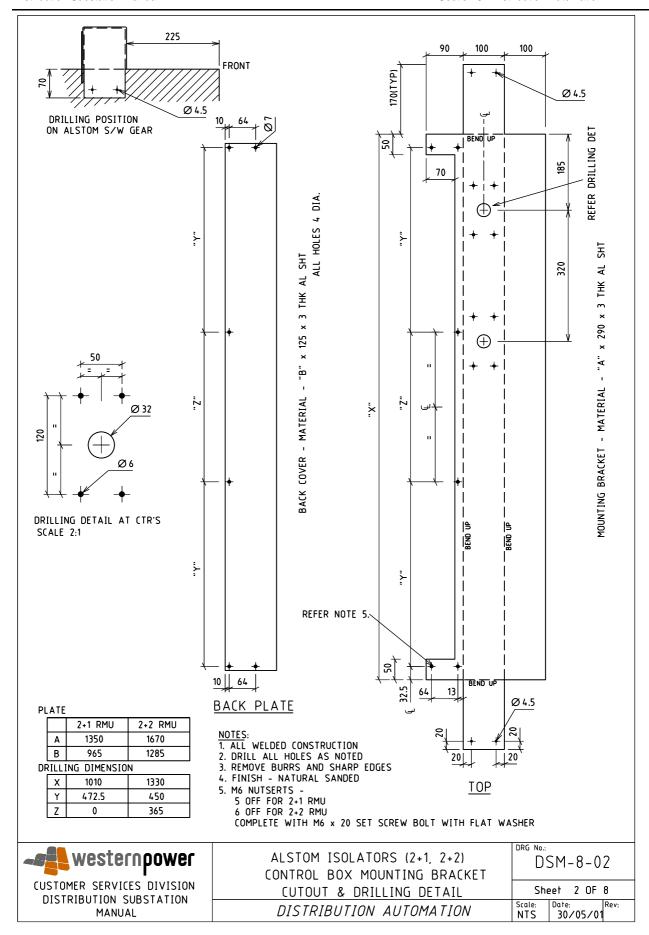




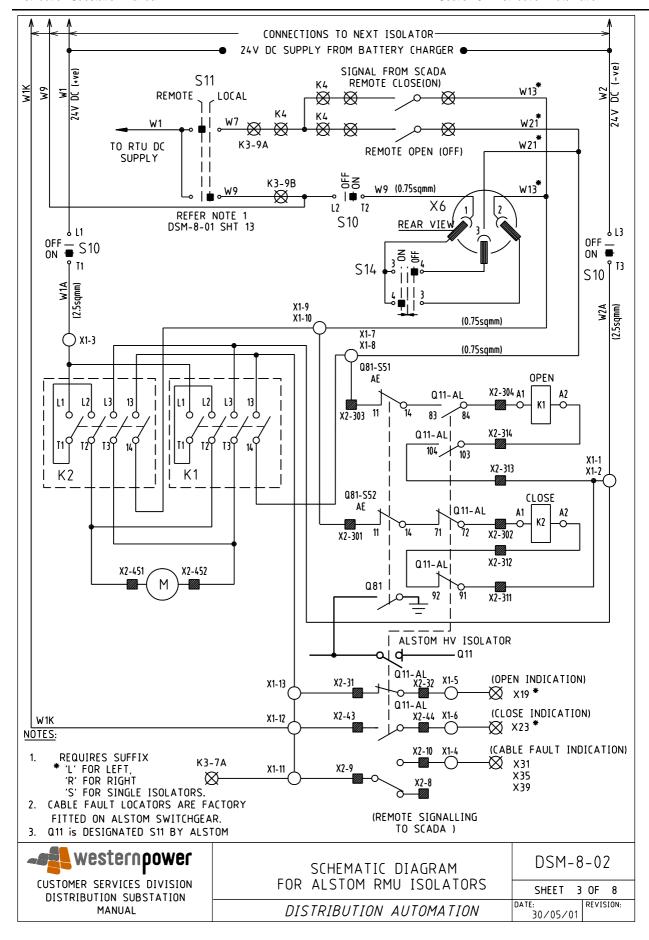



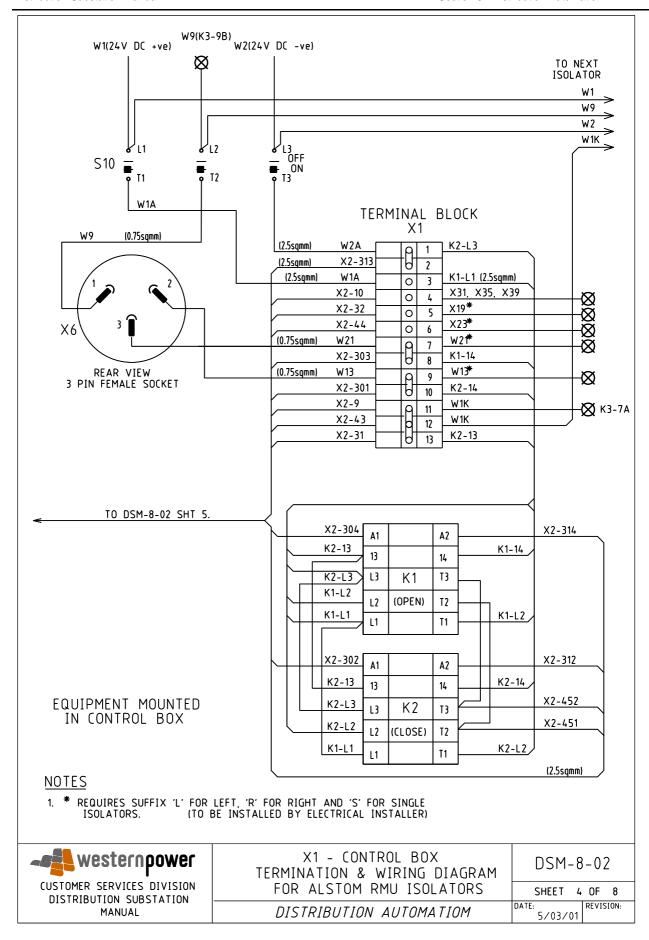



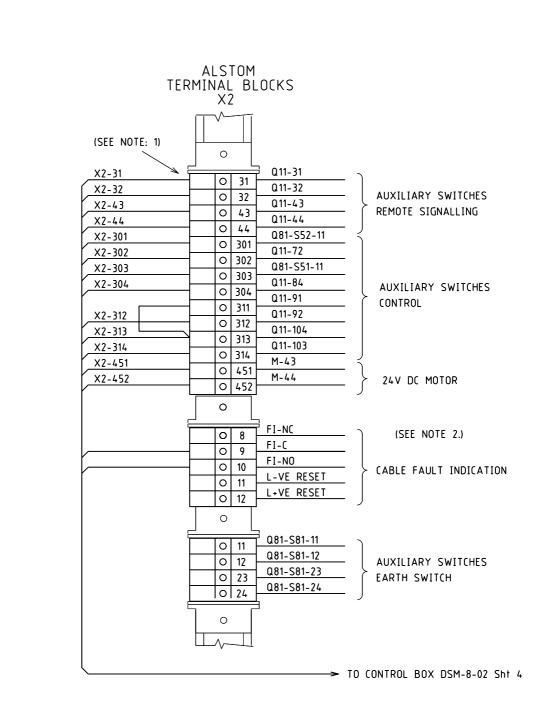


NOTES

- 1. FACTORY FITTED TERMINALS
- 2. CABLE FAULT INDICATOR TERMINALS ARE INSTALLED ONLY ON LEFT HAND ISOLATOR IE. BENEATH THE ONLY FAULT INDICATOR

westernpower	X2 - SWITCHGEAR TERMINATION & WIRING DIAGRAM	DSM-8-02
CUSTOMER SERVICES DIVISION DISTRIBUTION SUBSTATION	ALSTOM RMU ISOLATORS	SHEET 5 OF 8
MANUAL	DISTRIBUTION AUTOMATION	DATE: REVISION: 28/05/01




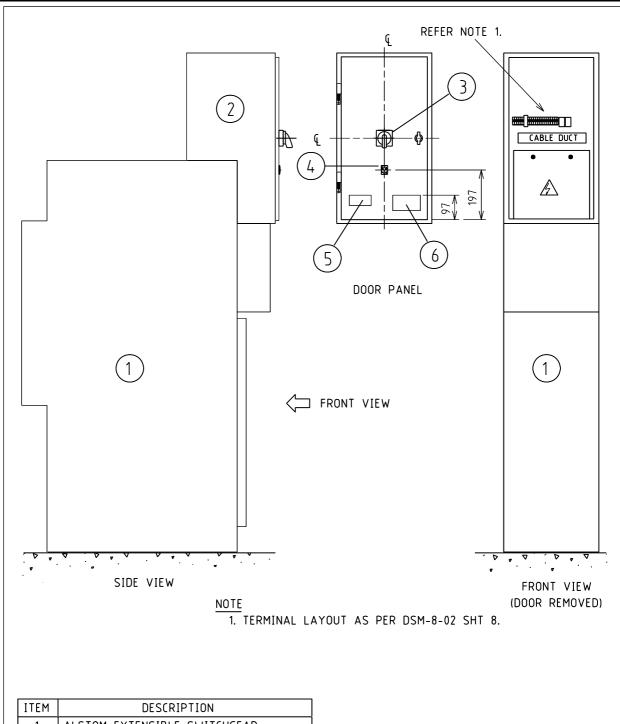


ITEM	DESCRIPTION
1	ALSTOM EXTENSIBLE SWITCHGEAR
2	INSTRUMENT CHAMBER
3	MOTOR ISOLATION SWITCH
4	CANNON TYPE SOCKET FOR LOCAL CONTROL
5	"ALPHA E" FAULT INDICATOR
6	MANUFACTURERS SWITCHGEAR NAME-PLATE

westernpower	GENERAL ARRANGEMENT	DSM-8-02
CUSTOMER SERVICES DIVISION DISTRIBUTION SUBSTATION	FOR ALSTOM EXTENSIBLE ISOLATOR	SHEET 6 OF 8
MANUAL	DISTRIBUTION AUTOMATION	DATE: REVISION: 3/04/01



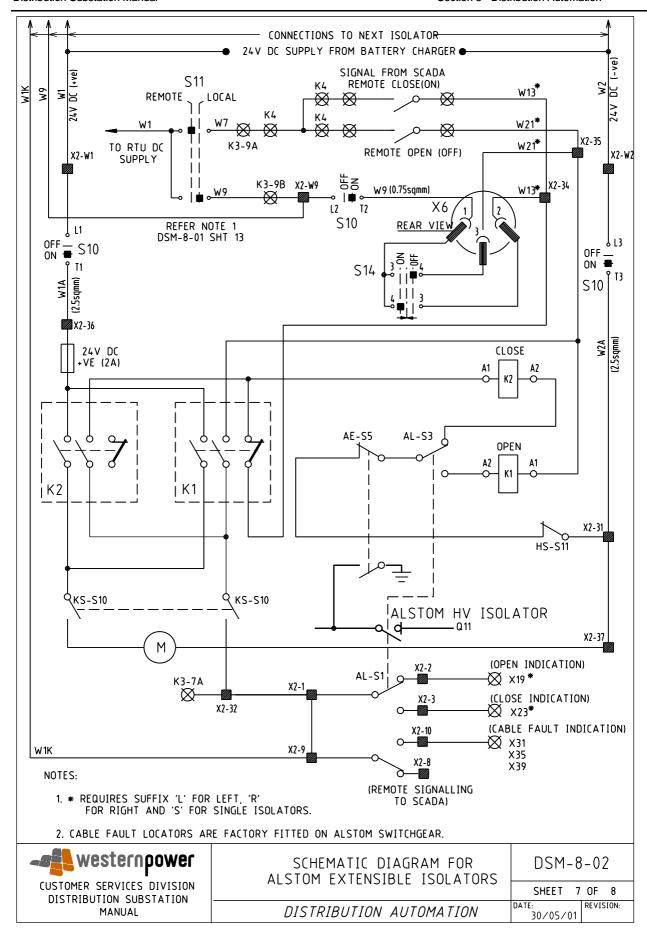



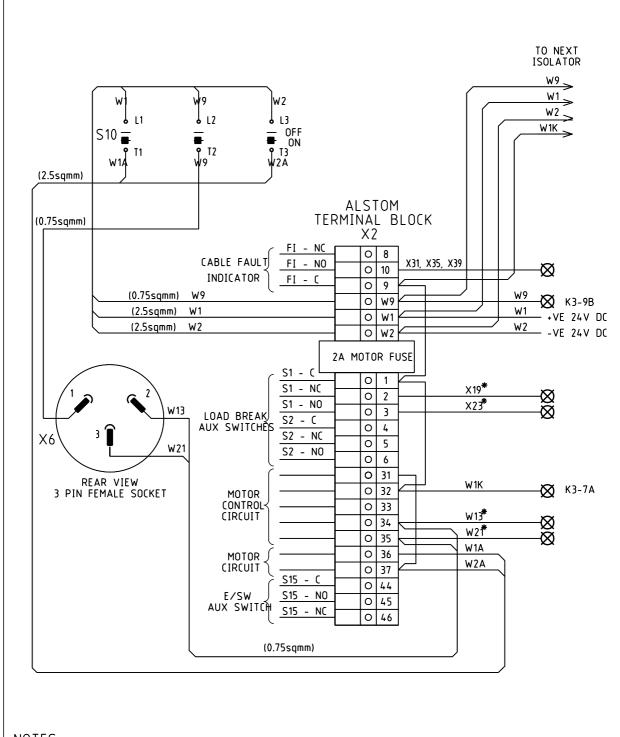


NOTES


- 1. *REQUIRES SUFFIX 'L' FOR LEFT, 'R' FOR RIGHT AND 'S' FOR SINGLE ISOLATORS. (TO BE INSTALLED BY ELECTRICAL INSTALLER)
- 2. FACTORY FITTED TERMINALS, WIRING TO/FROM ISOLATING SWITCH AND CANNON SOCKET (GENERALLY FACTORY FITTED)

westernpower	X2 - SWITCHGEAR TERMINATION & WIRING DIAGRAM	DSM-8-02
CUSTOMER SERVICES DIVISION	FOR ALSTOM EXTENSIBLE ISOLATORS	SHEET 8 OF 8
DISTRIBUTION SUBSTATION MANUAL	DISTRIBUTION AUTOMATION	DATE: REVISION: 26/05/01




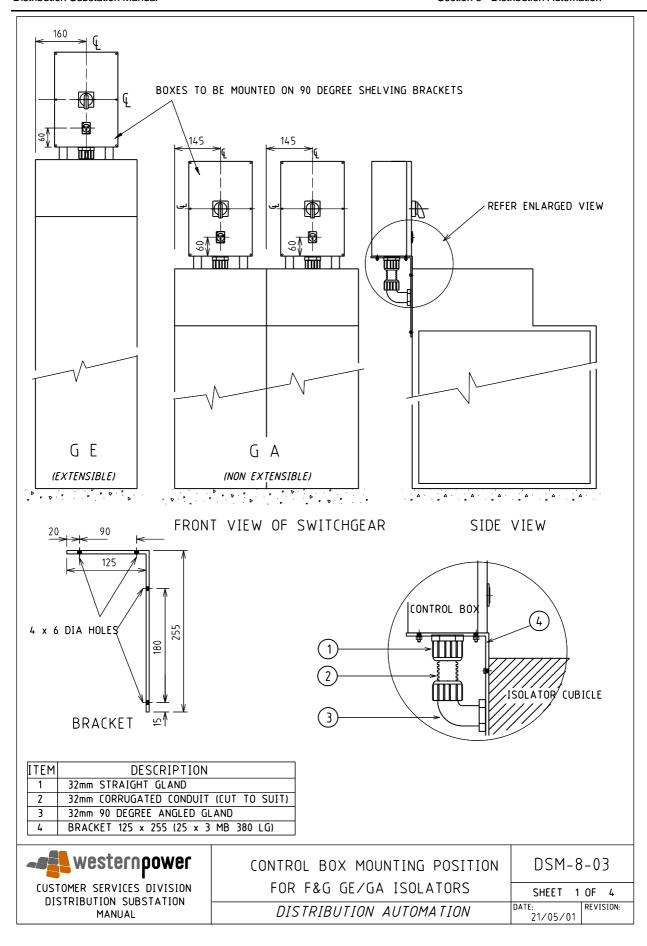




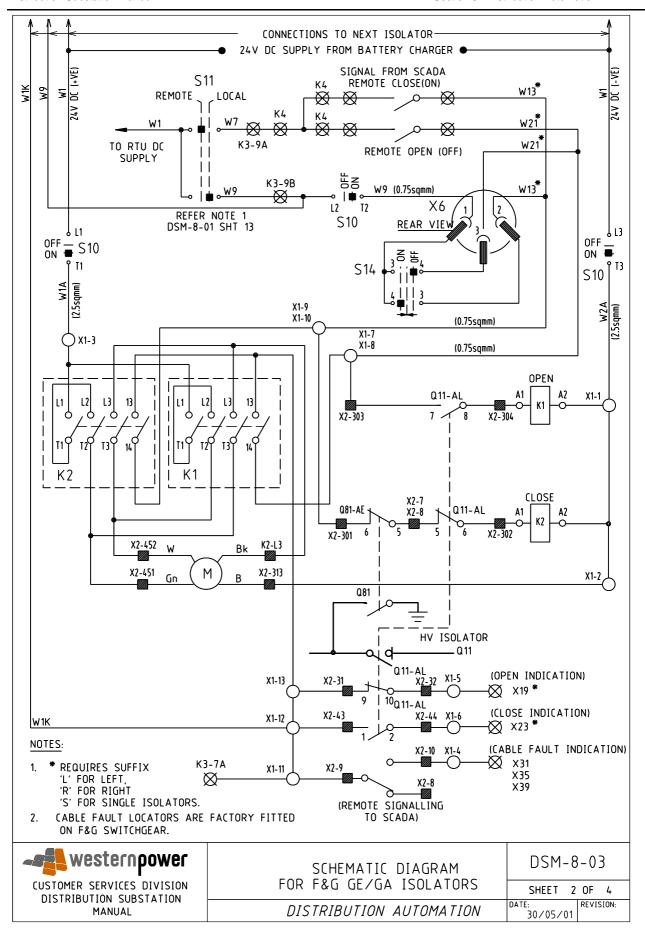



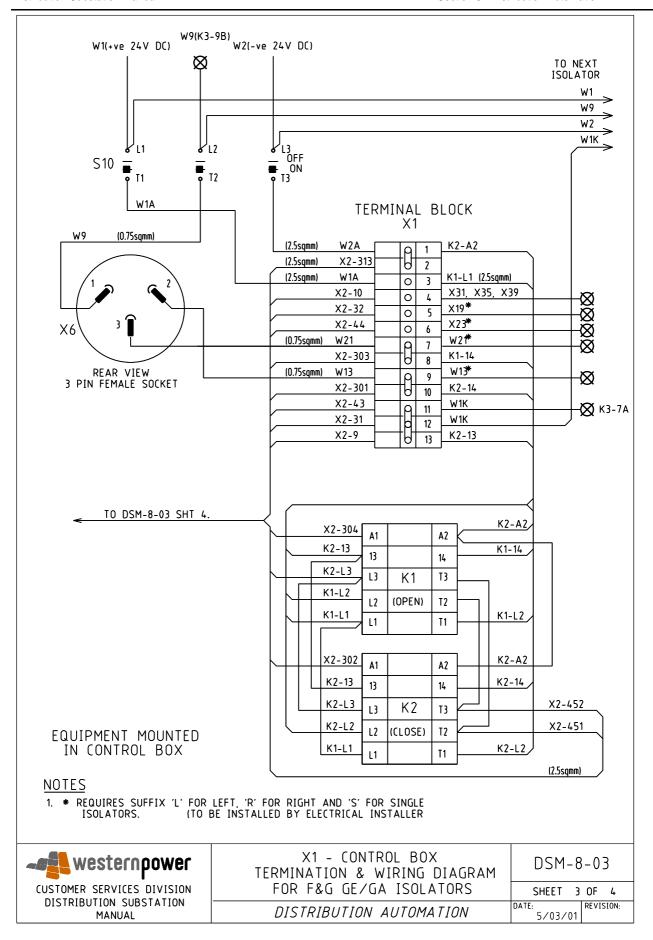



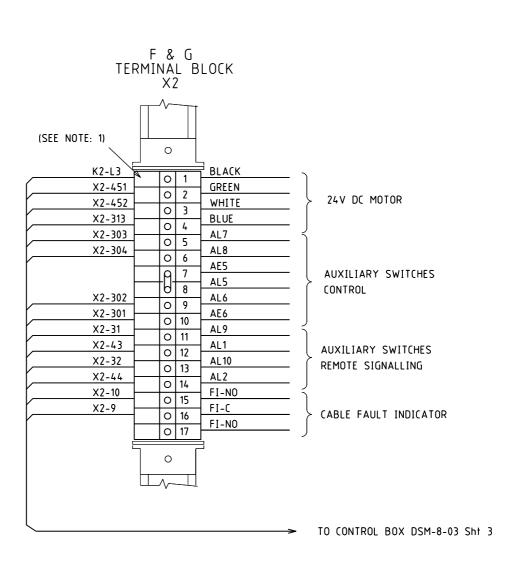


<u>NOTES</u>

1. TERMINALS FITTED BY ELECTRICAL INSTALLER

westernpower	X2 - SWITCHGEAR TERMINATION & WIRING DIAGRAM	DSM-8-03	3
CUSTOMER SERVICES DIVISION DISTRIBUTION SUBSTATION	FOR F&G GE/GA ISOLATORS	SHEET 4 OF	4
MANUAL	DISTRIBUTION AUTOMATION	DATE: REVIS 05/03/01	ION:




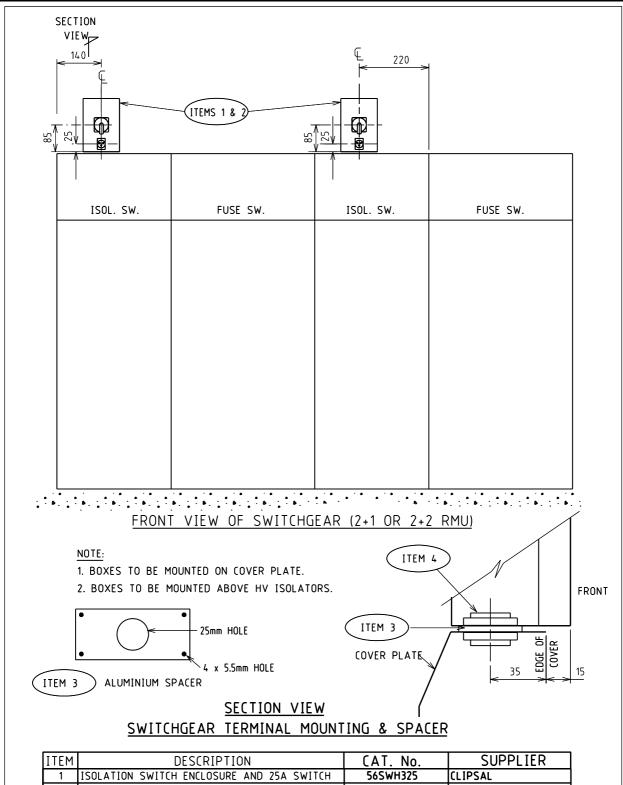

ITEM	DESCRIPTION	CAT. No.	SUPPLIER
1	ISOLATION SWITCH ENCLOSURE AND 25A SWITCH	56SWH325	CLIPSAL
2	CANNON TYPE SOCKET	306-780	FARNELL
3	ALUMINIUM SPACER - 90 x 40 x 6mm		WESTPOWER SERVICES
4	25mm NIPPLE AND 2 LOCKRINGS		" "






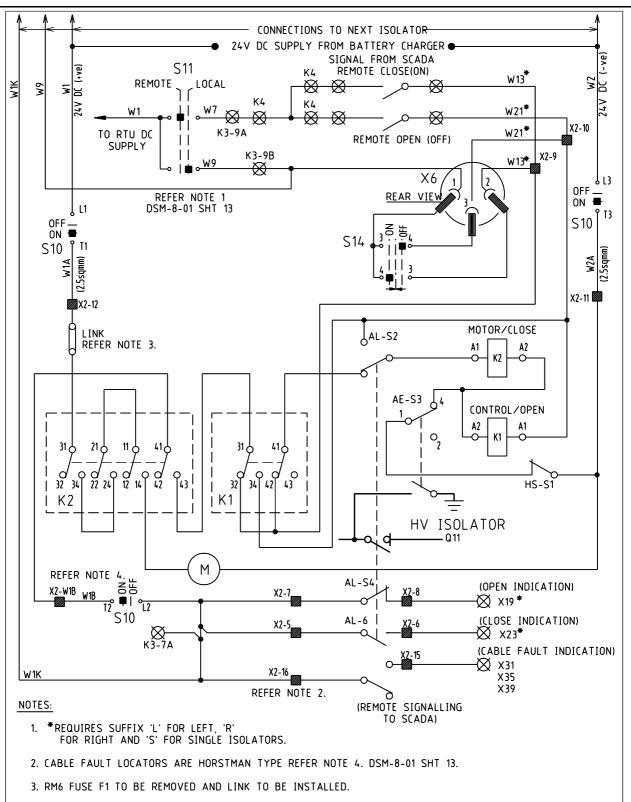


4. RM6 FUSE F2 TO BE REMOVED OFF PCB (PRINTED CIRCUIT BOARD) AND PLACED WITH 2 WAY PCB TERMINAL STRIP.

westernpower	SCHEMATIC DIAGRAM FOR	DSM-8-04
CUSTOMER SERVICES DIVISION DISTRIBUTION SUBSTATION	MERLIN GERIN RM6 ISOLATORS	SHEET 2 OF 10
MANUAL	DISTRIBUTION AUTOMATION	DATE: REVISION: 30/05/01




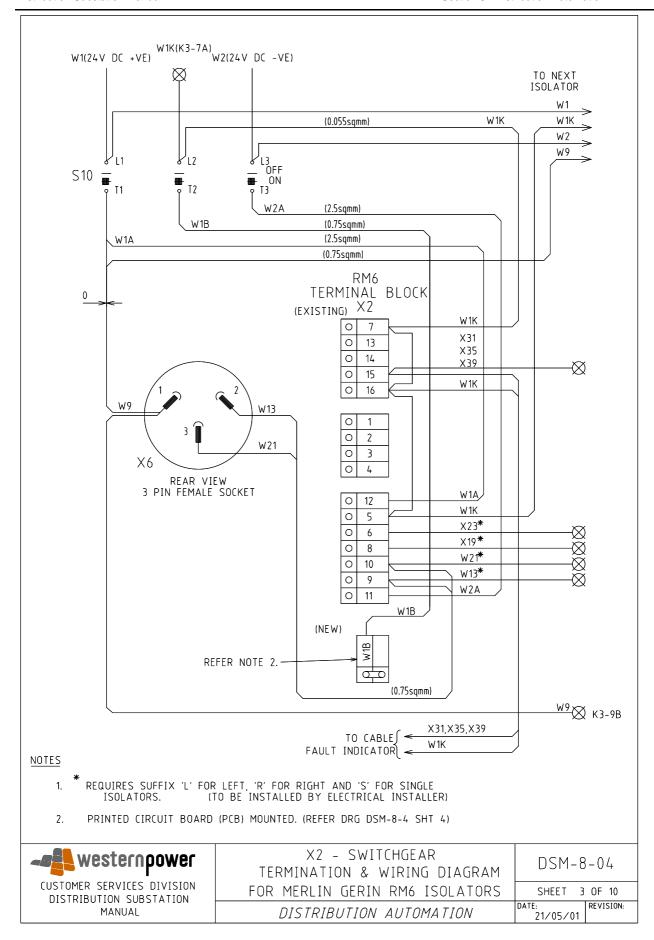




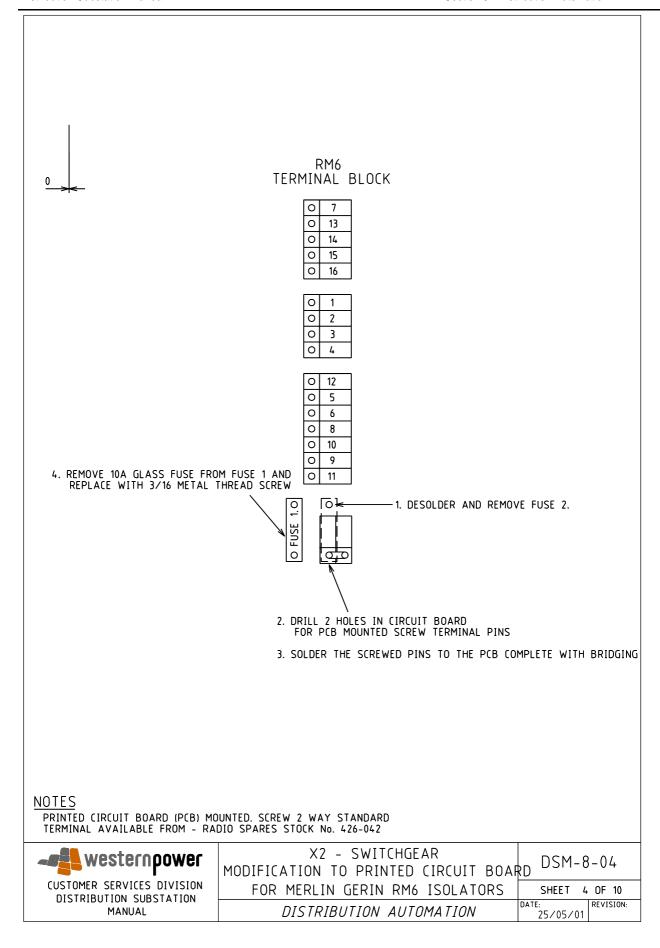




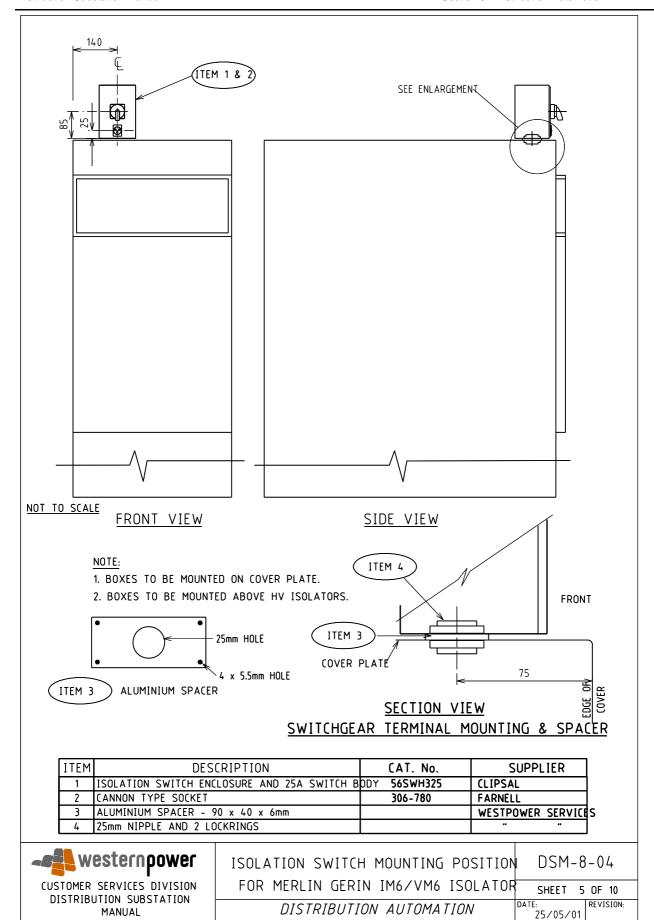




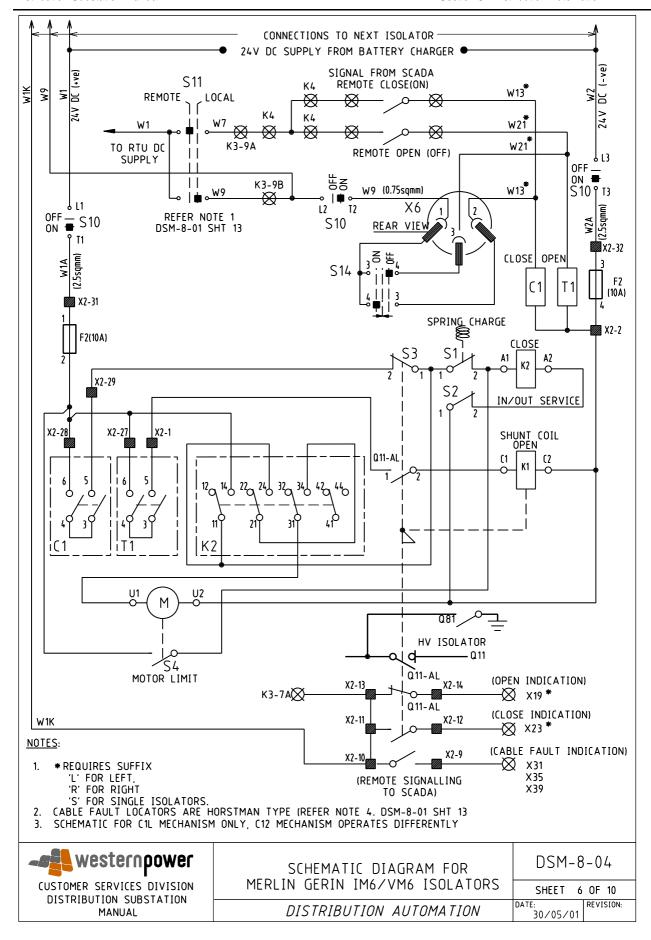



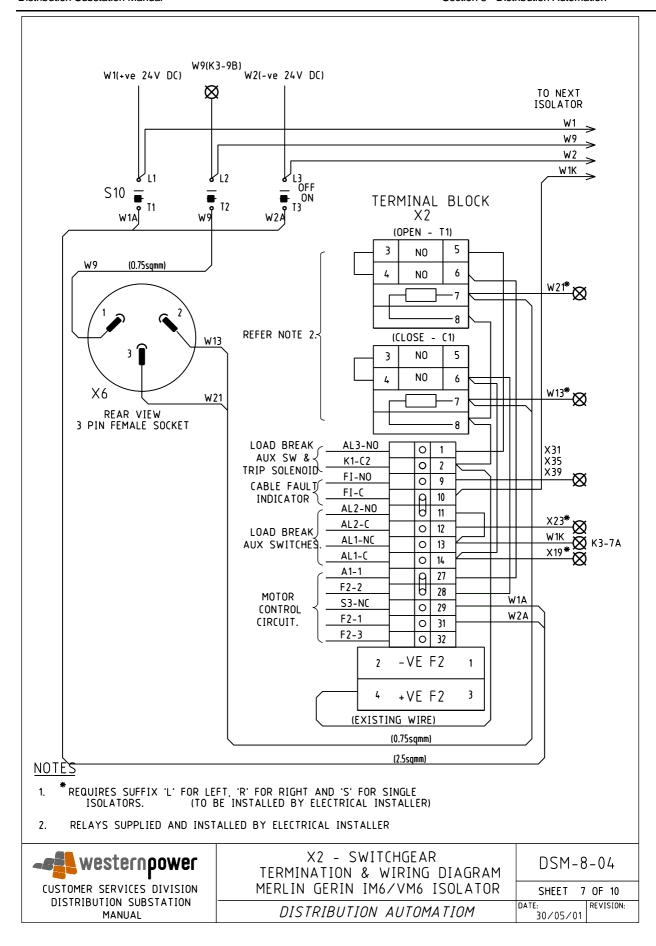




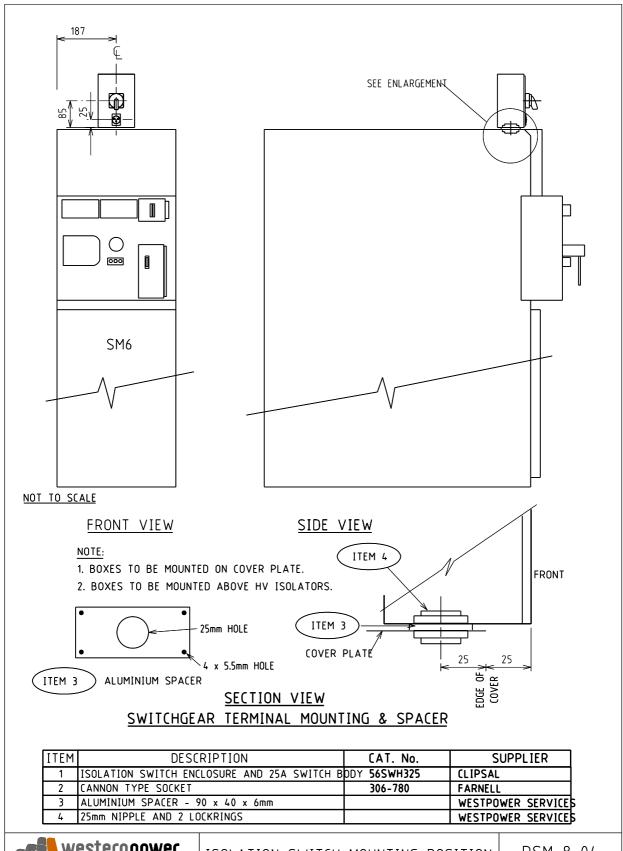


westernpower	ISOLATION SWITCH MOUNTING POSITION	DSM-8-04
CUSTOMER SERVICES DIVISION DISTRIBUTION SUBSTATION	FOR MERLIN GERIN SM6 ISOLATOR	SHEET 8 OF 10
MANUAL	DISTRIBUTION AUTOMATION	DATE: REVISION: 30/05/01



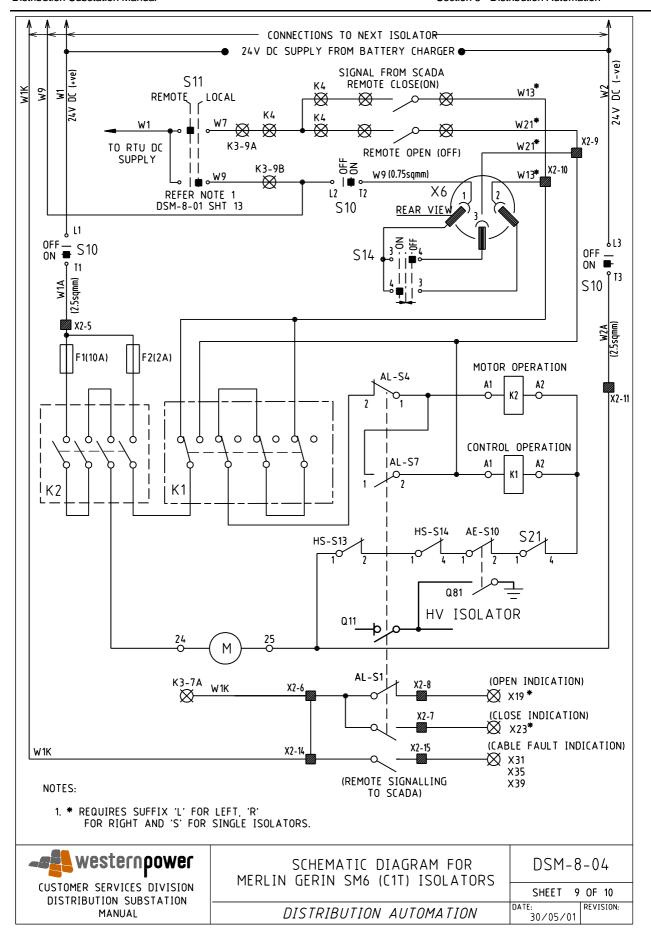



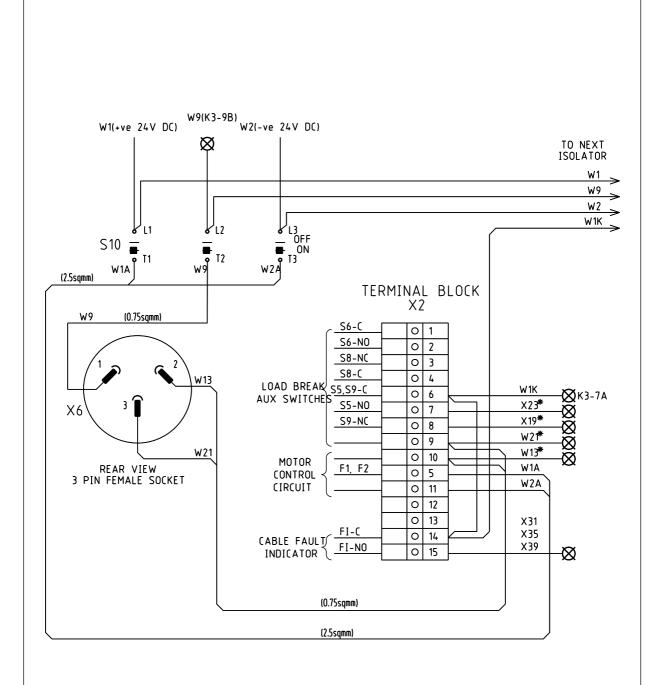


NOTES


- *REQUIRES SUFFIX 'L' FOR LEFT, 'R' FOR RIGHT AND 'S' FOR SINGLE ISOLATORS. (TO BE INSTALLED BY ELECTRICAL INSTALLER)
- 2. ADDITIONAL TERMINALS REQUIRED FOR FAULT INDICATION X2-14, X2-15 (TERMINALS FITTED BY ELECTRICAL INSTALLER)

westernpower	X2 - SWITCHGEAR TERMINATION & WIRING DIAGRAM	DSM-8-04	
CUSTOMER SERVICES DIVISION DISTRIBUTION SUBSTATION	FOR MERLIN GERIN SM6 ISOLATORS	SHEET 10 (OF 10
MANUAL	DISTRIBUTION AUTOMATION	DATE: R 28/05/01	REVISION:




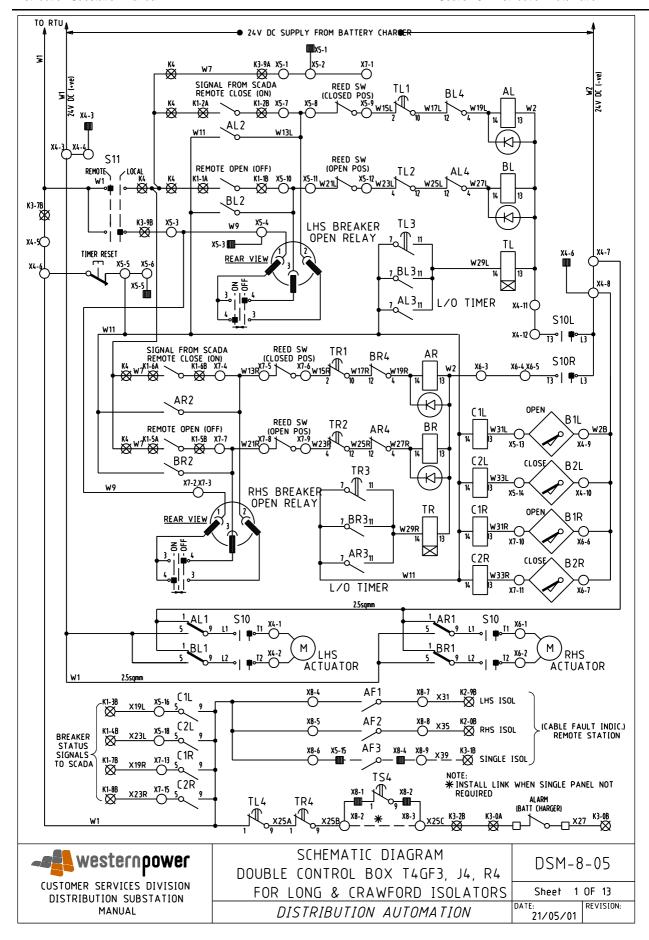




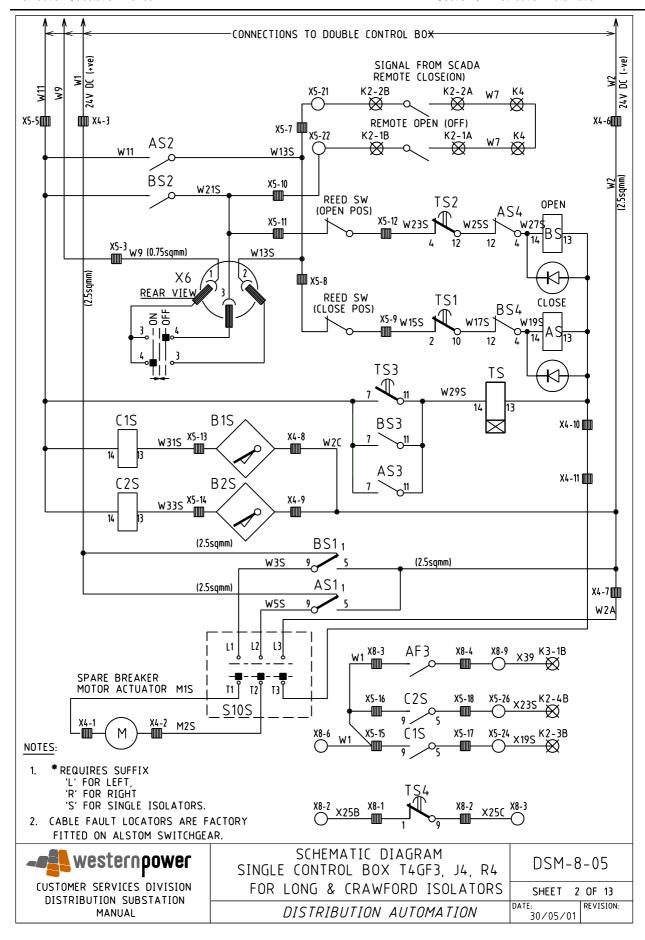




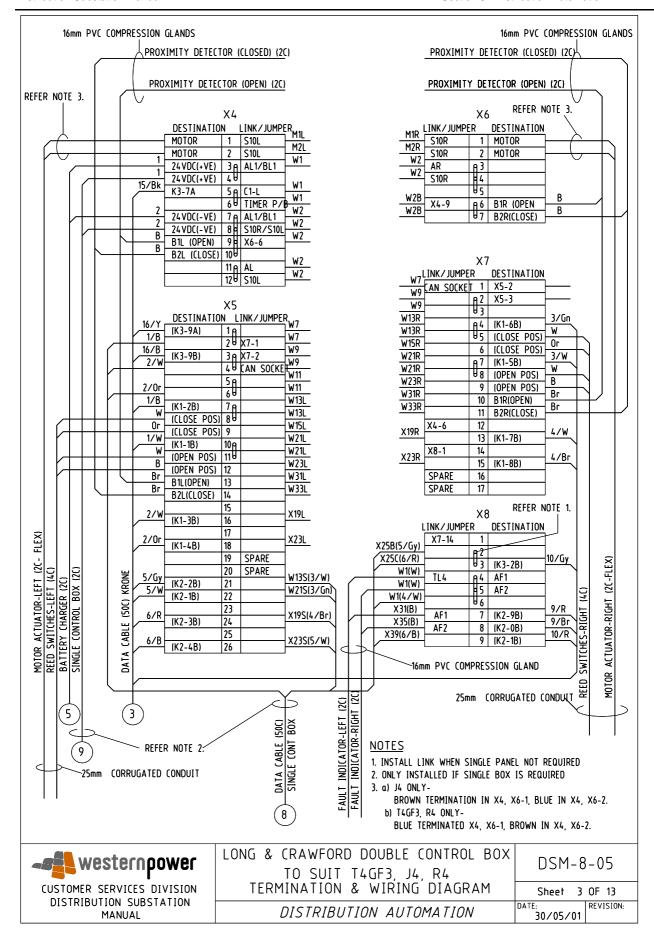



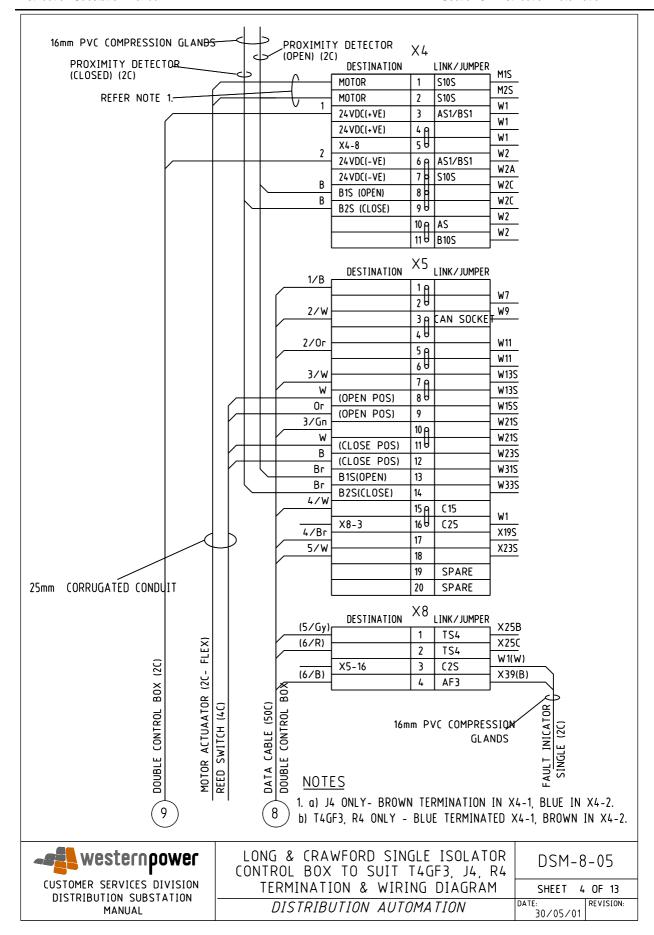





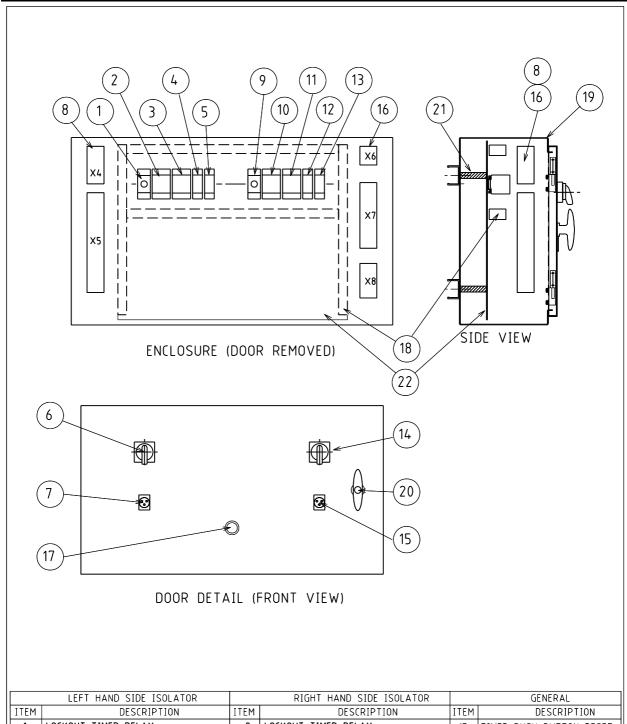


	LEFT HAND SIDE ISOLATOR		RIGHT HAND SIDE ISOLATOR	GENERAL	
ITEM	DESCRIPTION	ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	LOCKOUT TIMER RELAY	9	LOCKOUT TIMER RELAY	17	TIMER PUSH BUTTON RESET
2	BREAKER OPEN RELAY	10	BREAKER OPEN RELAY	18	SLOTTED CABLE DUCT (60×25)
3	BREAKER CLOSE RELAY	11	BREAKER CLOSE RELAY	19	CONTROL BOX ENCLOSURE
4	OPEN INDICATION RELAY	12	OPEN INDICATION RELAY	20	DOOR HANDLE
5	CLOSE INDICATION RELAY	13	CLOSE INDICATION RELAY	21	STANDOFF BRACKETS
6	MOTOR ACTUATOR ISOLATION SWITCH	14	MOTOR ACTUATOR ISOLATOR SWITCH	22	RELAY MOUNTING PLATE
7	CANNON TYPE SOCKET (LOCAL CONTRO) 15	CANNON TYPE SOCKET (LOCAL CONTROL)	
8	TERMINAL STRIP	16	TERMINAL STRIP		

0 TENTINAL STATE	IO TENTINAL STATE	
westernpower	LONG & CRAWFORD DOUBLE CONTROL BOX	DSM-8-05
CUSTOMER SERVICES DIVISION DISTRIBUTION SUBSTATION	ARRANGEMENT	Sheet 5 OF 13
MANUAL	DISTRIBUTION AUTOMATION	DATE: REVISION: 30/05/01

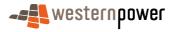

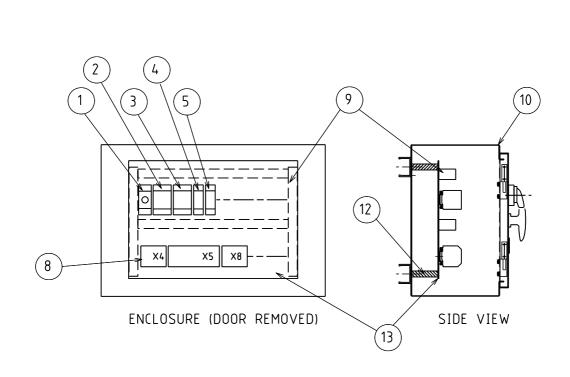

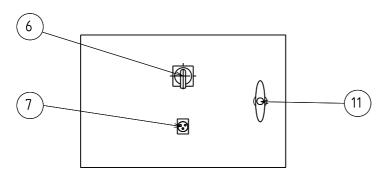


DOOR DETAIL (F	FRONT '	VIEW)
----------------	---------	-------


ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	LOCKOUT TIMER RELAY	9	SLOTTED CABLE DUCT (60×25)
2	BREAKER OPEN RELAY	10	CONTROL BOX ENCLOSURE
3	BREAKER CLOSE RELAY	11	DOOR HANDLE
4	OPEN INDICATION RELAY	12	STANDOFF BRACKETS
5	CLOSE INDICATION RELAY	13	RELAY MOUNTING PLATE
6	MOTOR ACTUATOR ISOLATION SWITCH		
7	CANNON TYPE SOCKET FOR LOCAL CONTROL	(S)	
8	TERMINAL STRIP		

westernpower westernpower	LONG & CRAWFORD SINGLE CONTROL BOX	DSM-8-05	
CUSTOMER SERVICES DIVISION DISTRIBUTION SUBSTATION	ARRANGEMENT	Sheet 6	OF 13
MANUAL	DISTRIBUTION AUTOMATION	DATE: 30/05/01	REVISION:




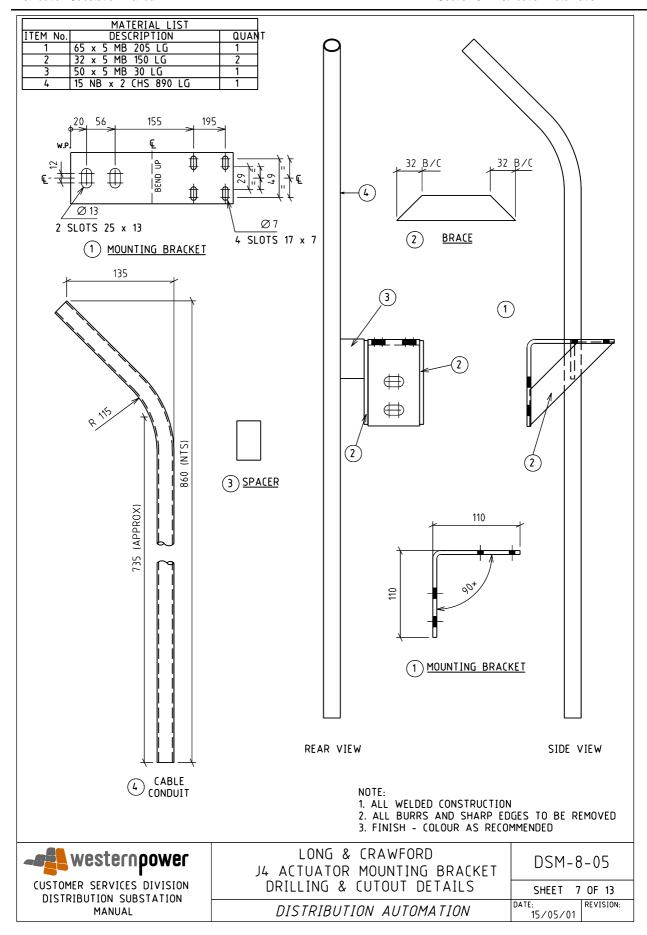




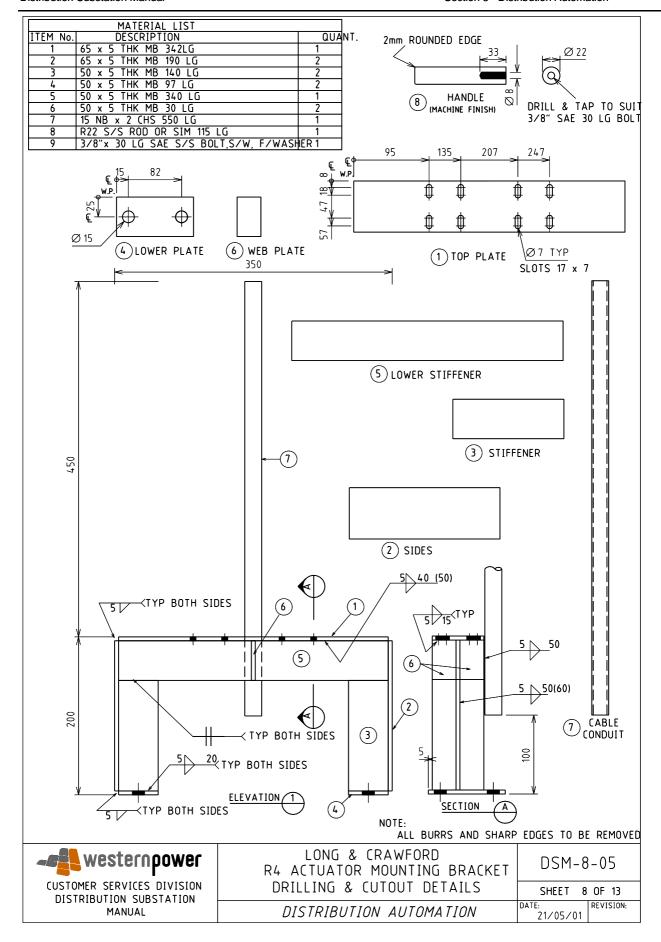




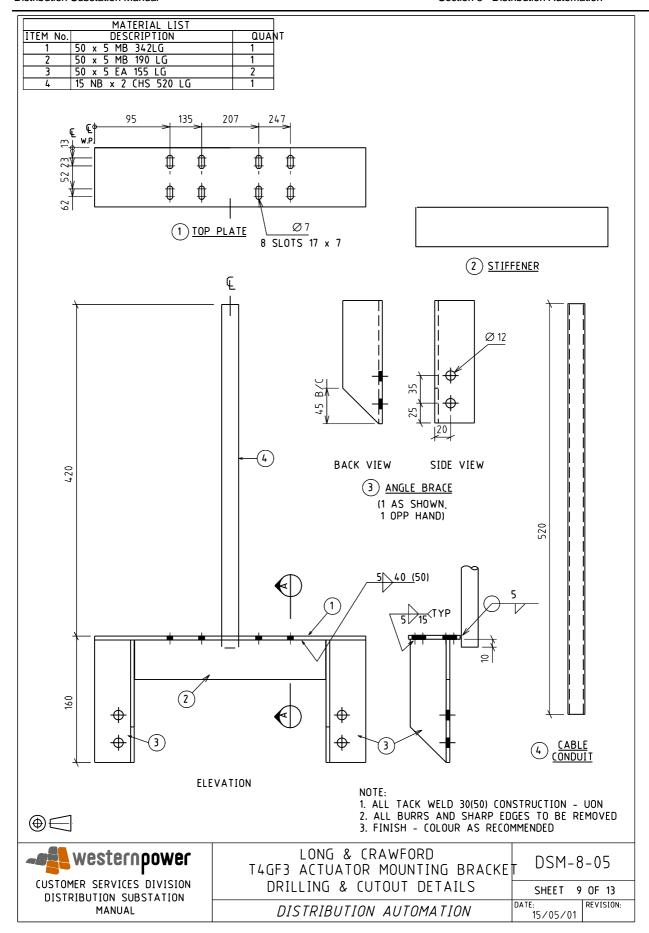




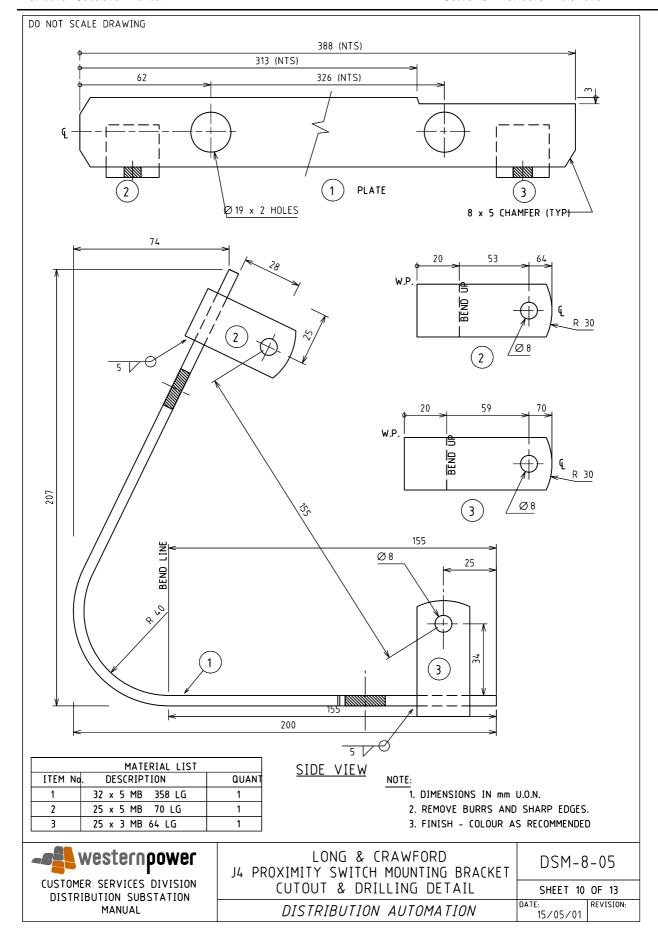



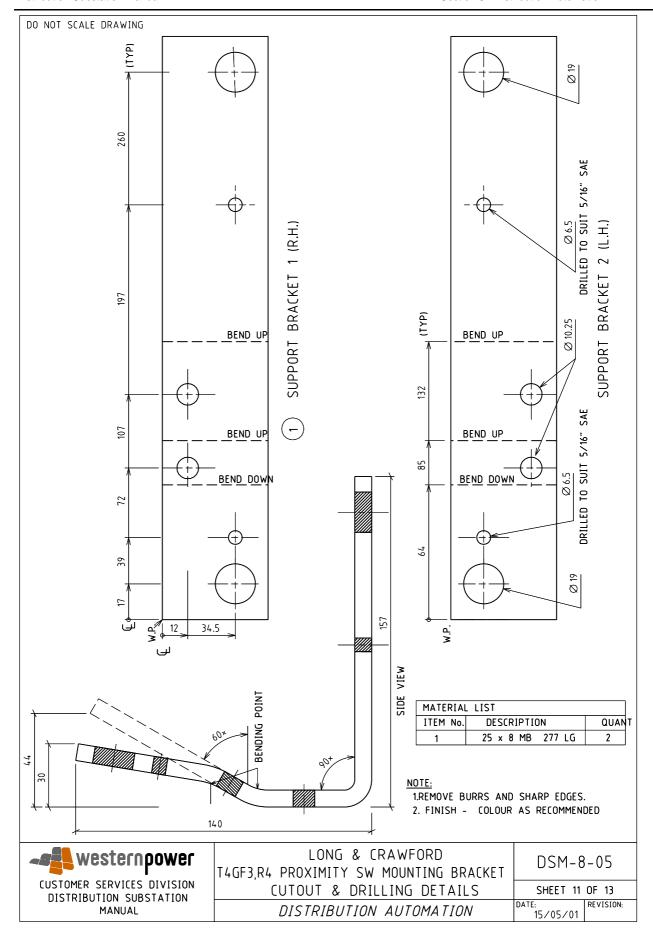



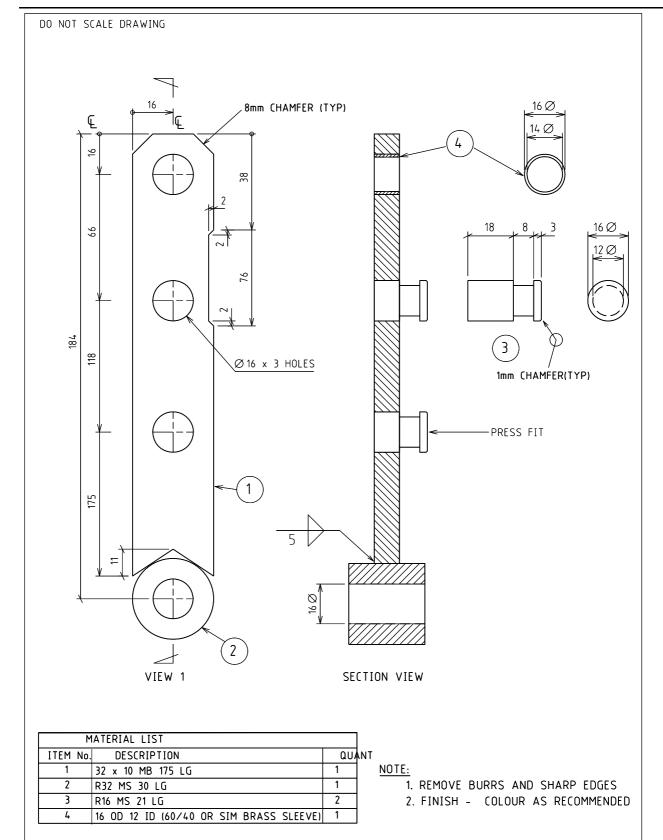

CUSTOMER SERVICES DIVISION DISTRIBUTION SUBSTATION MANUAL LONG & CRAWFORD

J4 ACTUATOR OPERATING HANDLE

CUTOUT & DRILLING DETAIL


DISTRIBUTION AUTOMATION

DSM-8-05

SHEET 12 OF 13

DATE: REVISION: 15/05/01



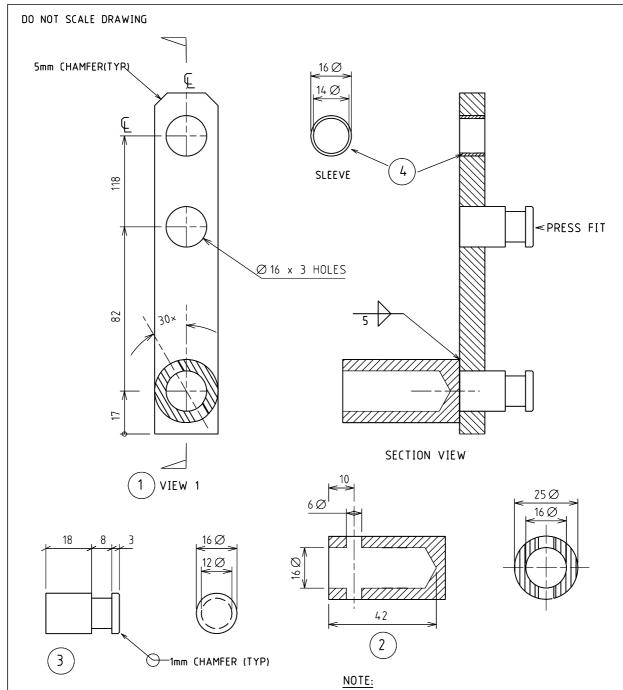


- 1. REMOVE BURRS AND SHARP EDGES
- 2. FINISH COLOUR AS RECOMMENDED

	MATERIAL LIST		
ITEM No.	DESCRIPTION	QU	∤ит
1	25 x 10 MB 135 LG	1	
2	R25 MS 46 LG	1	
3	R16 MS 27 LG	2	
4	16 OD 12 ID x 10 LG (60/40 OR SIM BRASS SLEEVE)	1	


westernpower	LONG & CRAWFORD		
CUSTOMER SERVICES DIVISION	T4GF3, R4 ACTUATOR OPERATING HAND		
DISTRIBUTION SUBSTATION	CUTOUT & DRILLING DETAIL		
MANUAL	DISTRIBUTION AUTOMATION		

R4 ACTUATOR OPERATING HANDLE	DSM-8	-05
CUTOUT & DRILLING DETAIL	SHEET 13	OF 13
DISTRIBUTION AUTOMATION	DATE: 15/05/01	REVISION:




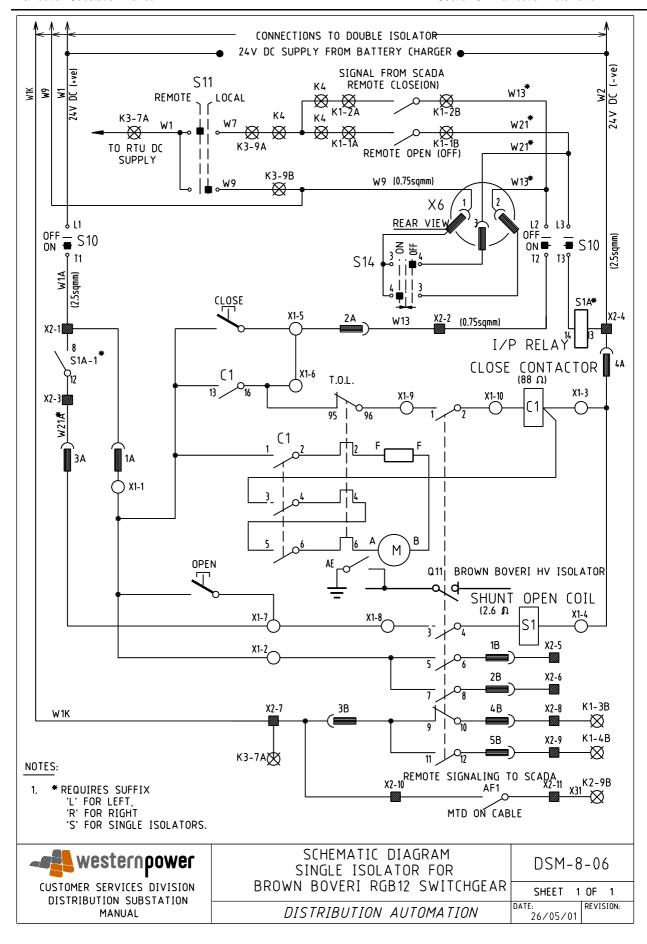




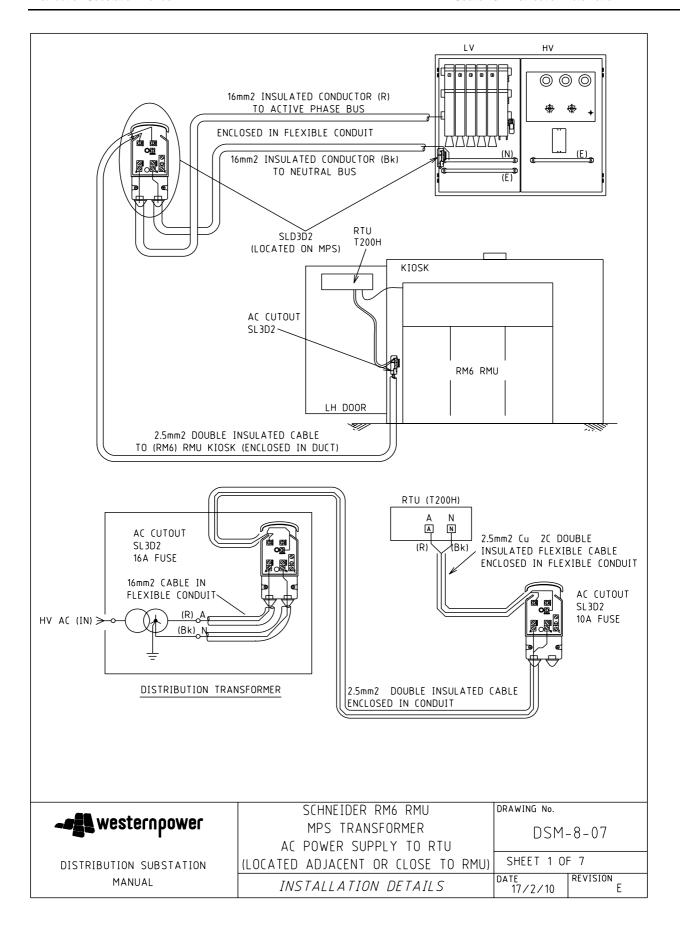




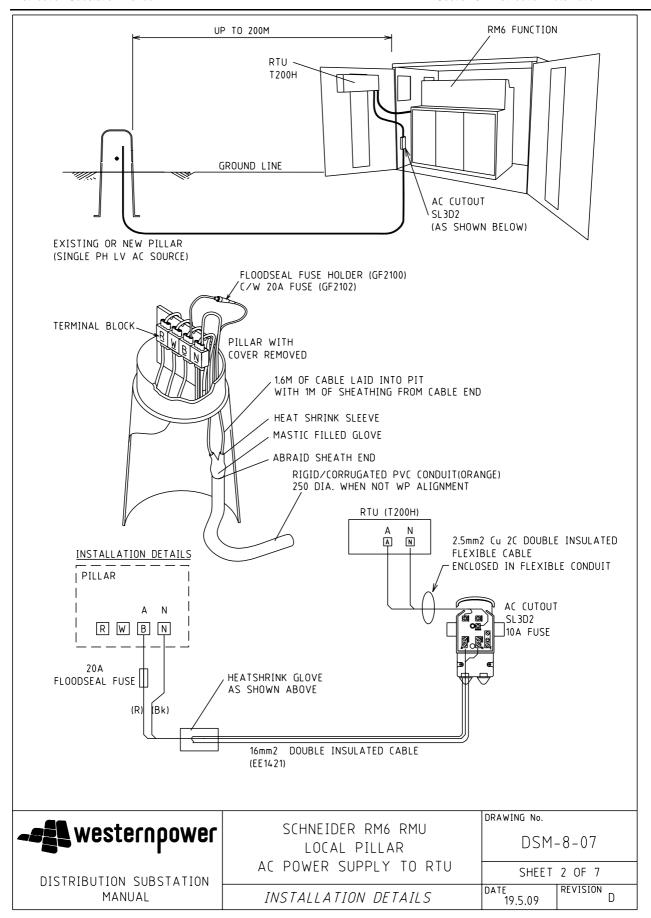




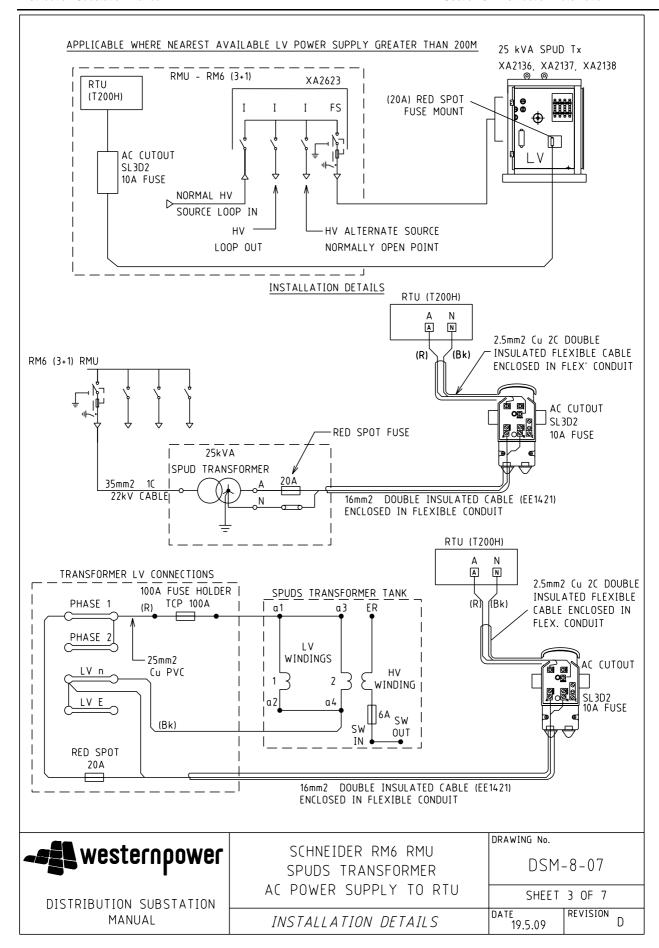




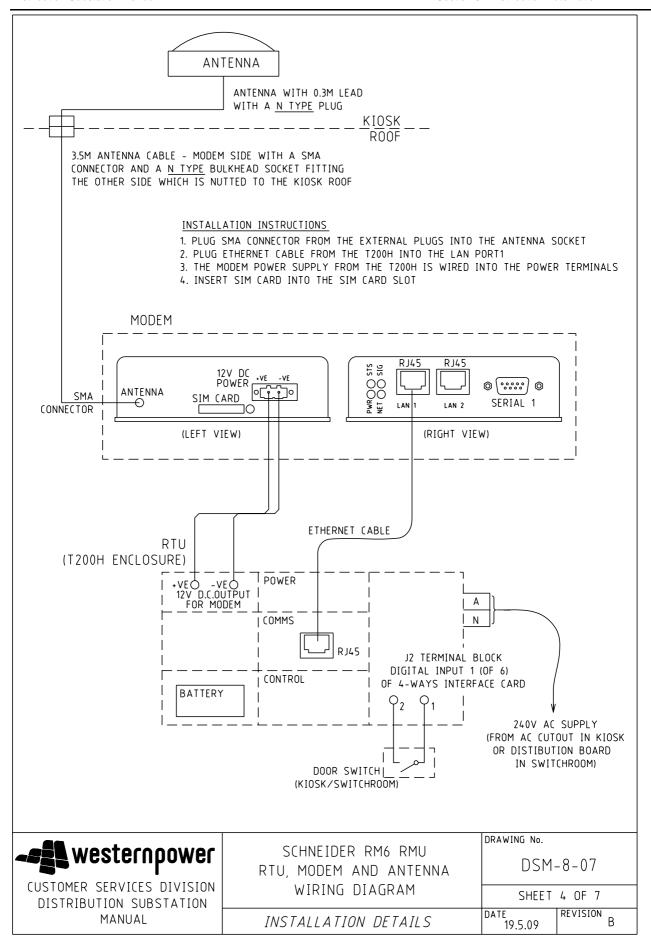




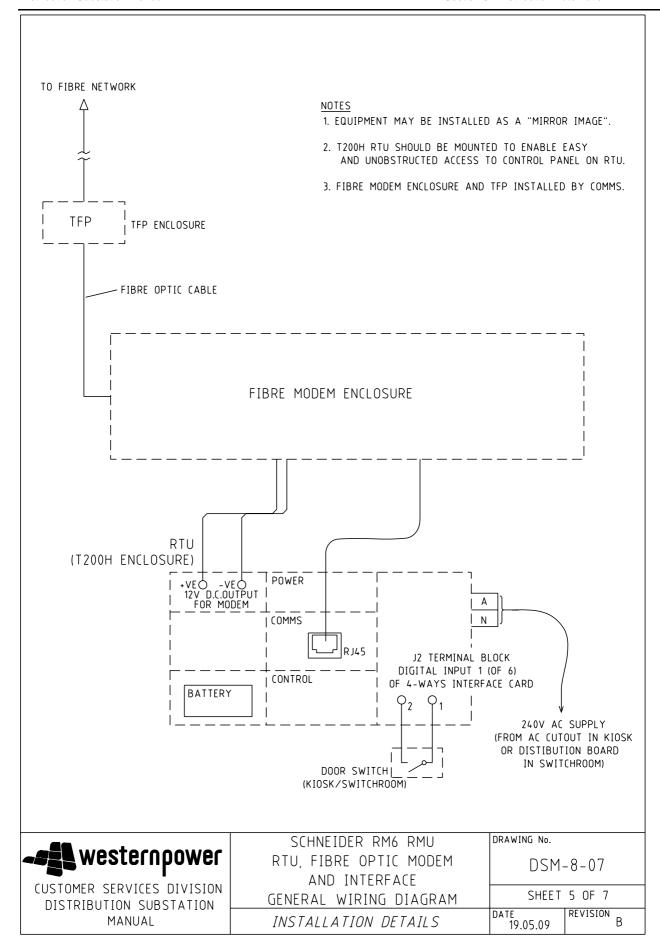




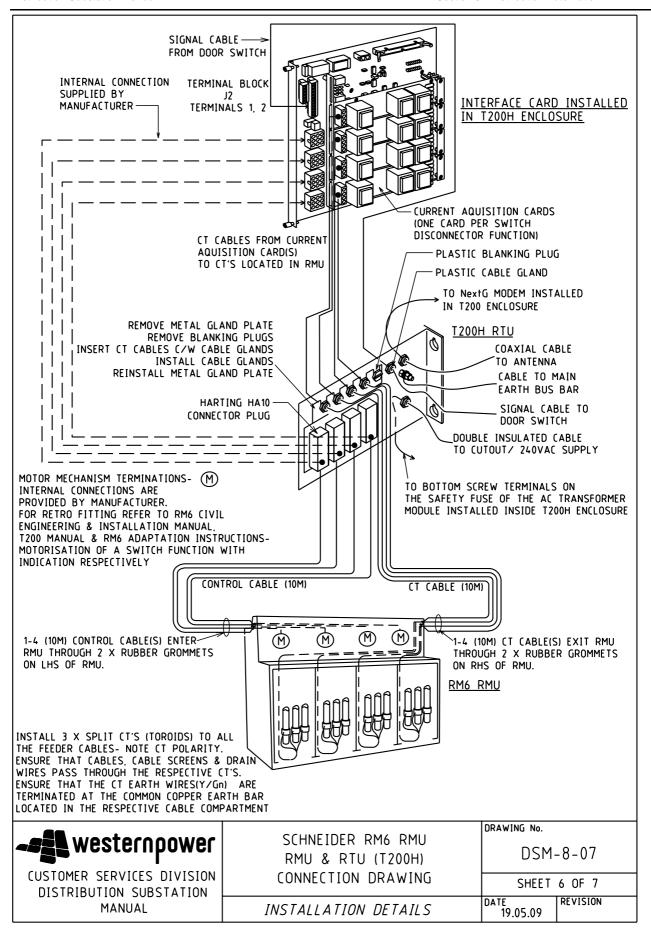




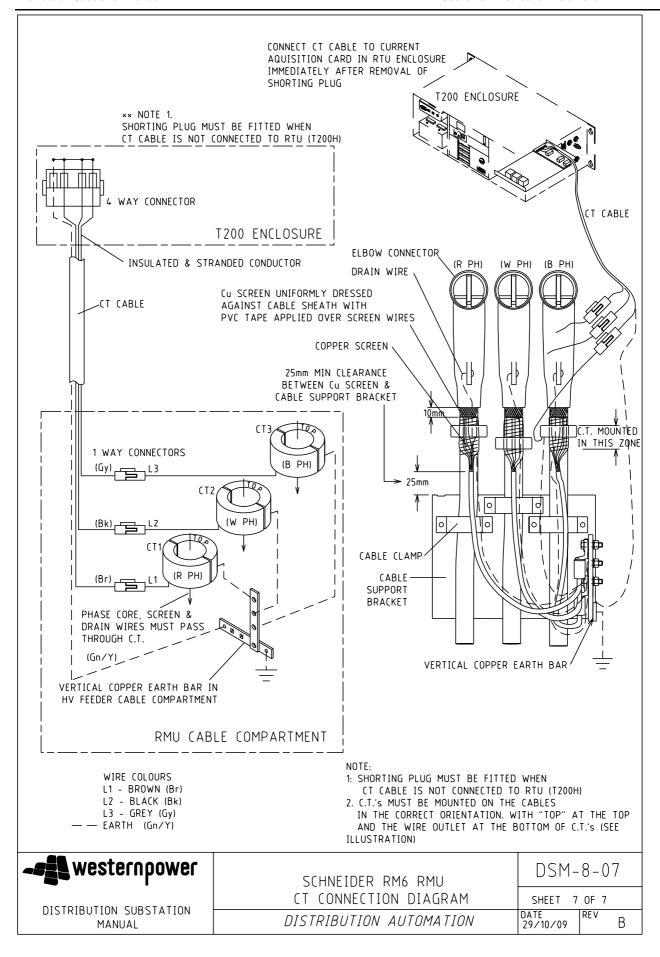



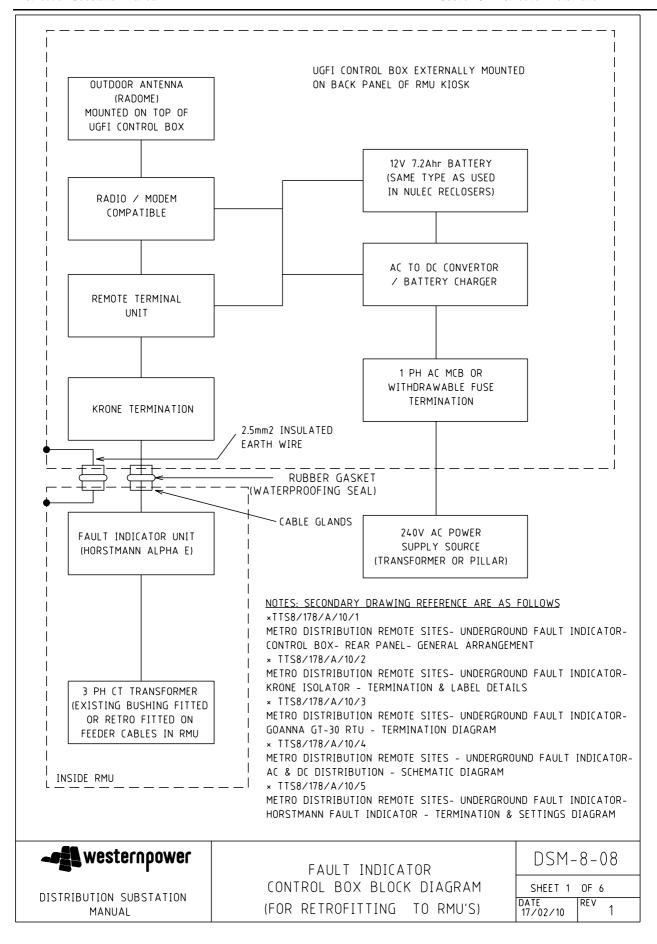



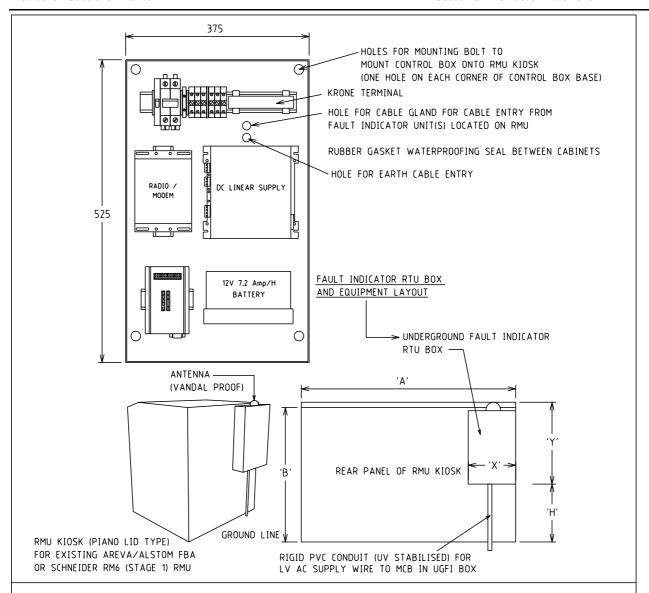

DIMENSIONS

PIANO LID KIOSK AREVA 3 WAY 4 WAY 5 WAY SCHNEIDER 3 WAY 4 WAY 5 WAY 'A' -1300 1700 1155 1155 2000 1430 1860 2450 1155 1400 1400 1400 UGFI BOX (DRAWING TTS8/178/A/10/1)

'X' = 325

'H' = 630 (PIANO LID KIOSK SUITABLE FOR AREVA FBA RMU) 'Y' = 525

'H' = 875 (PIANO LID KIOSK SUITABLE FOR NON EXTENSIBLE SCHNEIDER RM6 RMU)

RETRO-FITTING UGFI BOX NOTES:

- 1. MARK UP AND DRILL 6 HOLES ON REAR OF RMU KIOSK ENSURING HOLES MATCH THE UGFI BOX MOUNTING WITH FI CABLE AND EARTH ENTRY HOLES RESPECTIVELY OF SUITABLE SIZE TO MATCH CABLE GLANDS..
- 2. INSTALL THE UGFI BOX WITH CABLE GLANDS ONTO THE RMU KIOSK.
- 3. THREAD AC WIRE(DEAD) THROUGH PVC CONDUIT AND MOUNT PVC CONDUIT.
- 4. TERMINATE AC WIRE TO MCB, TERMINATING FI WIRE TO TERMINALS ON KRONE DIN RAIL IN UGFICB
- 5. THREAD THROUGH PVC CONDUIT CABLES FROM FAULT INDICATOR LOCATED IN RMU AND TERMINATE ON KRONE BLOCK LOCATED IN UGFI BOX.
- 6. THREAD THROUGH EARTH WIRE BETWEEN RMU KIOSK AND UGFI BOX AND TERMINATING AT BOTH ENDS



DISTRIBUTION SUBSTATION MANUAL

FAULT INDICATOR RTU BOX MOUNTED ON EXISTING RMU (AREVA/SCHNEIDER) INSTALLATION ON PIANO LID KIOSK

DSM-8-08 SHEET 2 OF 6

REV

DATE

17/02/10



