


**As of the 1 January 2018 for all External Design and Constructed Subdivisions, the Developer must provide a copy of the Landgate Approved Deposited Plan/s prior to requesting subdivision energisation.**

From January 2018 Western Power will energise lots within a subdivision only once they have been titled. All titles that are the subject of the Underground Distribution Scheme design must be represented on the Approved Deposited Plan to ensure that lots which have not been titled remain de-energised.

Follow these steps to ensure that you are ready for energisation prior to handover of your subdivision:

- Step 1:** Pay invoice and ensure all Western Power conditions on the Conditional Approval Letter are met
- Step 2:** Apply for clearance of Western Power conditions—[Clearance applications](#) take approximately 21 days to be processed
- Step 3:** Western Power will provide a Stamped Deposited Plan and a letter confirming clearance of the Western Power conditions
- Step 4:** Provide all required clearance documents to the Western Australian Planning Commission (WAPC)
- Step 5:** Lodge all approved WAPC documents with Landgate
- Step 6:** Provide Approved Deposited Plan (from Landgate) to [Western Power](#) prior to energisation.

Please note: The lots included on the Approved Deposited Plan(s) must match those shown on the Developers As Constructed drawing. If these do not match, the Developer must apply for a [Revision While Under Construction \(RWUC\)](#) to ensure that the electrical infrastructure supports energisation based on the title.

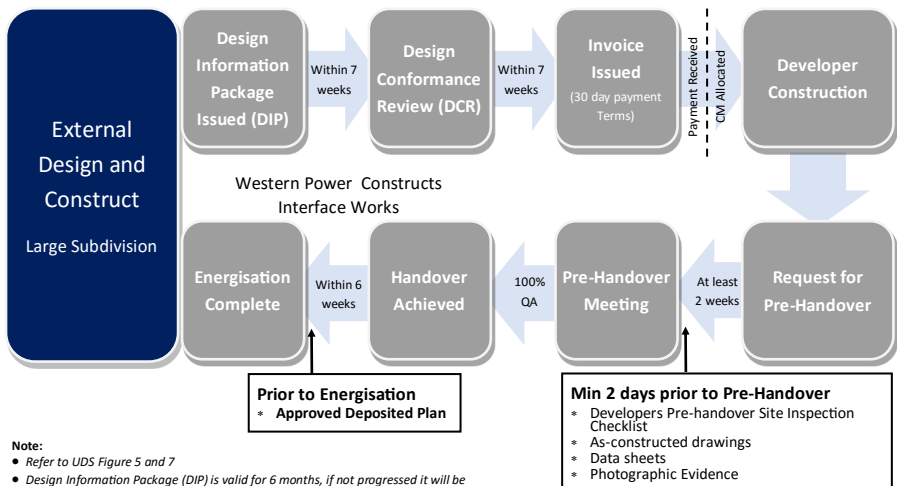

- Note:**
- Refer to UDS Figure 5 and 7
  - Design Information Package (DIP) is valid for 6 months, if not progressed it will be cancelled; all requests for extensions to the DIP must be applied for prior to expiry
  - Quote is valid for 90 days and payment terms are strictly 30 days from date of invoice
  - Construction of the subdivision must commence within 6 months of the date of invoice.